

DMX CHARTS

Channel	5 CH	7 CH	10 CH
1	RED	DIMMER	DIMMER
2	GREEN	RED	RED
3	BLUE	GREEN	GREEN
4	WHITE	BLUE	BLUE
5	ZOOM	WHITE	WHITE
6		STROBE	COLOR MACROS
7		ZOOM	STROBE
8			AUTO MODE
9			DIMMER SPEED
10			ZOOM

5 CH	7 CH	10 CH	Function	DMX Value	Default
	1	1	DIMMER 0~100%	000 ÷ 255	000
1	2	2	RED 0~100%	000 ÷ 255	000
2	3	3	GREEN 0~100%	000 ÷ 255	000
3	4	4	BLUE 0~100%	000 ÷ 255	000
4	5	5	WHITE 0~100%	000 ÷ 255	000
		6	COLOR No Function Color Macros	000 ÷ 015 016 ÷ 255	000
	6		STROBE No function Strobe from slow to fast	000 ÷ 011 011 ÷ 255	255
		7	STROBE/AUTO SPEED No function Strobe from slow to fast AUTO SPEED SLOW TO FAST Speed slow to fast	000 ÷ 011 011 ÷ 255 000 ÷ 255	255
		8	AUTO MODE RGBW mode Pulse effect 0-100% Pulse effect 100%-0 Pulse effect 100%-0-100% Auto fade transition Auto snap transition (3 colors) Auto snap transition (7 colors)	000 ÷ 010 011 ÷ 050 051 ÷ 090 091 ÷ 130 131 ÷ 170 171 ÷ 210 211 ÷ 255	000
		9	DIMMER SPEED Present dimmer speed from display menu Dimmer speed mode off Dimmer speed mode 1 (fast speed) Dimmer speed mode 2 (middle speed) Dimmer speed mode 3 (slow speed)	000 ÷ 051 052 ÷ 101 102 ÷ 152 153 ÷ 203 204 ÷ 255	000
5	7	10	ZOOM 0~100%	000 ÷ 255	000