

单页(共9页): 长: 9cm, 宽: 6cm

正面

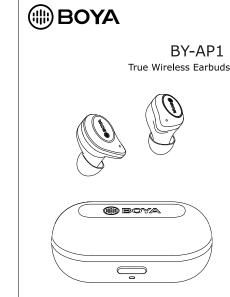


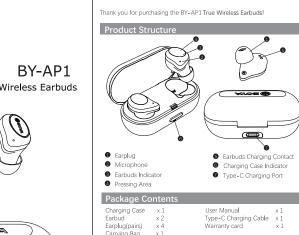

Tips: please fully charge the earbuds and charging case before first use

Automatically

① Left/right earbuds will automatically turn on after taken out from charging case.
② Left/right earbuds will automatically turn off after placed back to charging case, with red light up

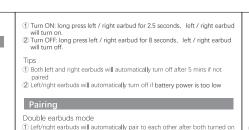

Turn on and Turn off or your more comfortable choice, t zes in the packaging.

Play/Pause:
 Double tap left/right earbud

Please use original or qualified charging cable.
 Do not disassemble or modify the earbuds yours

: Bluetooth signal is not stable? Check if there's big electromagnetic interference surrounded
 Check if the earbuds are too far from device
 Restart the device, to prevent the problem of signal instability.

: How to connect earbuds with device?

4 Turn off the wifi and try again How to tell if the earbuds are fully charged?

A: 1) Make sure the earbuds charging contacts are clean (2) Whether the earbuds are placed in the charging case. (3) Whether the charging case has sufficient power. Q: The earbuds volume cannot be adjusted

3)The free service provided by this warranty does not include product accessories and other packaging, gifts products and so on.

): No sound from the earbuds?

12-Month Quality Warranty Lifetime Technical Service Suppo

warrany service in case the damage is caused during normal use 2.Under the following circumstances, the free warranty will be refused. We wi however provide free repair service but charging fee for parts A. The product has been inshandled, inadvertently used, or damaged due to irressibile movement. B. The product is disassembled and repaired privately without the company's permission. C. The earbud unit has been in form of debris or impacted, which caused by man-made damages, such as the deform, crush of the diaphragm, or soak for a long time. D. The using time exceed 1 year


Changes or modifications not expressly approved by the party responsi-ble for compliancecould void the user's authority to operate the equip-

ment.
This device complies with Part
15 of the FCC Rules. Operation is subject to the following two conditions


(1) this device may not cause harmful interference, and
 (2) this device must accept any interference received, including interference that may cause undesired operation,

€R Ø KHS Ä



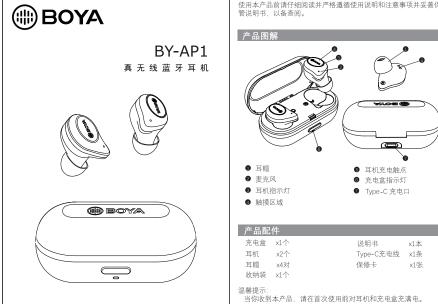



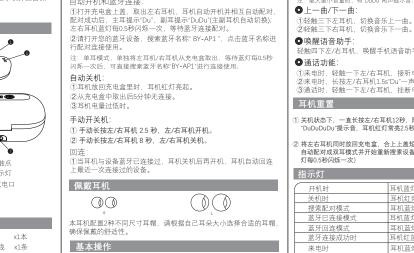


①音乐播放时,轻触两下左/右耳机,控制音乐暂停。 ②音乐暂停时,轻触两下左/右耳机,控制音乐继续播放。

●播放/暂停:

● 音量增加/音量减少:



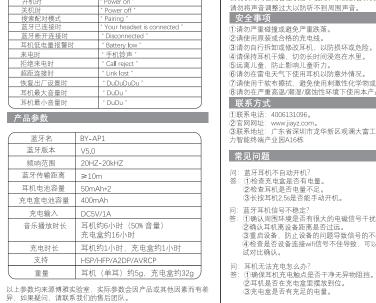

大以防听不到周围声音。	按公日40L1.55 DU 一戶, 增加40省重一倍。 ②连接大部分安卓系统手机, 调节耳机上的音量控制, 手机上不会有音量条显示, 共15格音量, 需要用耳朵去感受音量的变化。
格的充电线。 修改耳机,以防损坏或危险。 ,以勿从长时间浸泡在水里。 影响儿童听力。 下使用耳机以防意外情况。	问: 蓝牙耳机听不到声音? 答: (7)检查耳机是否与手机连接, 媒体音频是否有选择上。 (2)检查耳机音量是否调至到静音状态。 (3)检查耳机周围是否有电磁干扰或与手机距离过远。
·扶,避免使用刺激性化学物或强力洗涤剂。 /潮湿/腐蚀性环境下使用本产品。	问: 蓝牙耳机怎么连接手机? 答: ①耳机开机进入搜索配对状态,蓝灯每0.5秒闪烁一次。 ②打开手机蓝牙,搜索蓝牙设备点击配对连接。
5131096。 ,ijayz.com。 -首深圳市龙华新区观澜大富工业区硅谷动 A16栋	问:如何判断耳机已经充满电? 答:①耳机充电时长约1小时。 ②当耳机充满电时,耳机红灯转为蓝灯常亮7秒后熄灭。
LATONY	保修 ■ 12个月质量保修
动开机? 是否有电量。 否电量不足。 55是否能手动开机。 不稳定? 塊是否有很大的电磁信号干扰。 设备距离是否过远。 防止设备的问题导致信号的不稳定。 备连接wifi信号不住导致,可以关闭wifi尝 怎么办? 电触点是否干净无异物阻挡。 充电盘里摆放到位。 有充足的电量。	保修规定 ①消费者子购买一年内,产品出现质量问题,经本公司技术人员证实该产品属于正常使用下发生的故障,将提供免费维修服务。 ②在下列情况下,本公司拒绝提供免费保修服务,但提供维修服务,免收人工费,只收取零件费。 A产品被错误操作、疏忽使用或因不可抗拒而导致机件损坏。 B产品未经公司允许私下抵到和维修。 C.耳机单元进杂物或撞击导致膜片变形,压烂、长时间泡水、外壳破损、变形等人为损坏。 D产品超过一年有效保修期。 ③此保修提供的免费服务不包括产品附件及其他包装、赠送品等。

●唤醒语音助手:

●通话功能:

轻触四下左/右耳机,唤醒手机语音助手。