



TRANSLATION OF THE
ORIGINAL INSTRUCTION MANUAL
ELECTRIC CHAIN HOIST LP



Table of contents

Spare parts / Ordering spare parts	4
0 General information	5
0.1 General safety instructions	5
0.1.1 Safety and hazard information	5
0.2 General safety regulations and organisational measures	5
0.2.1 Warning markings / Legends / Warning plates	5
0.3 Particular safety instructions	5
0.4 Instructions for hazard protection	6
0.4.1 Hazards - Mechanical	6
0.4.2 Hazards - Electrical	7
0.4.3 Sound pressure level	7
0.5 Technical status	7
0.5.1 Periodic checks	8
0.5.2 Warranty	8
0.6 Appropriate use	8
0.6.1 Use of the instruction manual	10
1 Description	10
1.1 Operating conditions	10
1.2 General description	12
2 Start-up	13
2.1 Transport and assembly	13
2.2 Connections	14
2.2.1 Electrical connections	14
2.2.2 Brake system	15
2.2.3 Load chain	16
2.2.4 Limit switch	18
2.2.5 Chain container	19
3 Care and maintenance	20
3.1 General guidelines for maintenance and repair	20
3.2 Care and maintenance	21
3.2.1 Care overview	21
3.2.2 Maintenance overview	21
3.2.3 Brake system	21
3.2.4 Load chain	22
3.2.5 Chain guidance	23
3.2.6 Limit stop	23
3.2.7 Transmission	23
3.2.8 Slipping clutch	23
3.2.9 Suspension parts	23
4 Measures for achieving safe operating periods	24
4.1 Determining the actual operating time	24
4.2 General overhaul	25
4.3 Disposal	25
5 Annex	26
5.1 Technical data	26
5.2 Electrical parameters	28
5.3 EC Declaration of conformity	30
5.4 EC Declaration of incorporation	31

Spare parts / Ordering spare parts

The correct order numbers for original spare parts can be obtained from the corresponding spare parts list. Please ensure that you have the following data on your electric chain hoist to hand. This will enable the correct spare parts to be supplied without delay.

Electric chain hoist type:

Serial number:

Year of manufacture:

Load capacity:

Original spare parts for the electric chain hoists can be acquired from the following addresses:

Manufacturer

GIS AG	Tel. +41 (0)41 984 11 33
Swiss Lifting Solutions	tel@gis-ag.ch
Luzernerstrasse 50	www.gis-ag.ch
CH-6247 Schötz	

Resellers / Agent

0 General information

0.1 General safety instructions

0.1.1 Safety and hazard information

The following symbols and terms are used in this instruction manual for safety and hazard instructions:



WARNING !

Non-compliance, either in part or full, with operating instructions with this symbol can result in serious personal injury or fatal accidents. Warning information must be **strictly** adhered to.



ATTENTION !

Non-compliance, either in part or full, with operating instructions with this symbol can result in major damage to machinery, property or material. Information in the "Caution" category is to be **exactly** adhered to.



NOTE

Following the instructions marked with this symbol will lead to more effective and straightforward operation. "Note" directions make work easier.

0.2 General safety regulations and organisational measures

The instruction manual for the electric chain hoist must always be available within the operating area of the hoist. The instructions mentioned in this manual must be strictly adhered to. Furthermore, supplementary to the instruction manual, the statutory regulations governing general accident prevention and environmental protection are to be enforced.

Operating and service personnel must have read and understood the instruction manual, in particular the safety instructions, before commencing work. Protective equipment must be made available for operating and service personnel and worn at all times. The operator or their representative is responsible for supervising operating personnel and ensuring they are aware of the hazards and safety implications of working with the electric chain hoist.

The manufacturer reserves the right to make technical changes to the product or changes to these instructions and assumes no liability for the completeness and up-to-dateness of these instructions. The original version of these instructions is in the German language. In case of doubt, the original German original version is exclusively valid as a reference document.

0.2.1 Warning markings / Legends / Warning plates

- Oil chain.....figure 0-1
- CE signfigure 0-2
- Type plate figure 0-3
- Data plate figure 0-4
- Voltage..... figure 0-5

Figure 0-1

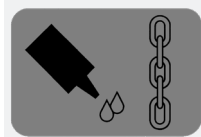


Figure 0-2



Figure 0-3

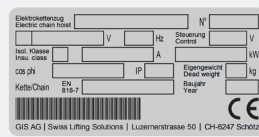


Figure 0-4

		Last / Load t (metric)						
Type	m/min	A3 (M3)	A4 (M4)	A5 (M5)	A6 (M6)	A7 (M7)	A7 (M7)	
Type	80 Hz	100 Hz	120 Hz	150 Hz	200 Hz	240 Hz	240 Hz	
	80 Hz	20% (E2)	20% (E2)	10% (E1)	10% (E1)	10% (E1)	10% (E1)	
	120 Hz	20% (E2)	20% (E2)	10% (E1)	10% (E1)	10% (E1)	10% (E1)	
	150 Hz	20% (E2)	20% (E2)	10% (E1)	10% (E1)	10% (E1)	10% (E1)	
	200 Hz	20% (E2)	20% (E2)	10% (E1)	10% (E1)	10% (E1)	10% (E1)	
	240 Hz	20% (E2)	20% (E2)	10% (E1)	10% (E1)	10% (E1)	10% (E1)	

Figure 0-5



0.3 Particular safety instructions

Transport and assembly:

- Electric chain hoists, single parts and large components should be carefully fixed to suitable and technically acceptable hoisting apparatus / load handling devices.

Connection:

- Connection work is only to be performed by personnel specifically designated and trained for the job.

Start-up / operation:

- Before initial start-up as well as daily start-up, carry out a visual check and carry out the stipulated user-checks routine.
- Only operate the electric chain hoist if the protective and safety equipment provided is ready and working.
- Damage to the electric chain hoist and changes in its operational characteristics must be reported immediately to the responsible person.
- After use, or when in a non-operational mode, the electric chain hoist should be secured against unauthorised and unintentional use.
- Refrain from hazardous procedures.

See also operational parameters (chapter 0.6).

Cleaning / service / repair / maintenance / refitting:

- Use working platforms provided for assembly work at high level.
- Do not use machine parts for this purpose.
- Check electrical cables for damage or wear.
- Ensure any oils or other agents used are collected and disposed of safely and in an environmentally sound manner..
- Reassemble and check safety devices that have been disassembled for maintenance or repair of the hoist once service and repair work has been completed.
- Adhere to predefined testing and service intervals specified in the instruction manual.
- Follow the directions in the instruction manual regarding exchanging parts.
- Operating personnel should be informed before commencing special or repair work.
- Secure the repair working area.
- Prevent the electric chain hoist from being unexpectedly switched on during maintenance or repair work.
- Attach warning plates.
- Disconnect the power cable and ensure it cannot be switched on again by unauthorised personnel.
- Retighten screw connections that have been loosened for repair or maintenance work.
- Replace non-reusable fixing elements (e.g. self-locking nuts, washers, cotter pins, O-rings and seals).

Shut down / storage:

- Clean and preserve (lubricate/grease) the electric chain hoist before long periods of inactivity or storage.

0.4 Instructions for hazard protection

Hazardous areas must be clearly marked by warning plates and cordoned off. It must be ensured that warnings regarding hazardous areas are given due attention.

Hazards can stem from:

- incorrect application
- not following safety directions properly
- not carrying out test and service work thoroughly

0.4.1 Hazards - Mechanical

**Physical injury:****Unconsciousness and injury through:**

- crushing, shearing, cutting and twisting
- drawing in, ramming, piercing and rubbing
- slipping, stumbling and falling

Causes:

- crushing, shearing and twisting
- parts rupturing or bursting

Safety options:

- keep floor, equipment and machinery clean
- eliminate leakages
- observe the required safety distance

0.4.2 Hazards - Electrical

Work on electrical apparatus or machinery may only be performed by qualified electricians or persons under the supervision and guidance of qualified electricians, in accordance with electrical regulations.



Physical injury:

Death from electrical shock, injury and burns through:

- contact
- faulty insulation
- faulty maintenance or repair work
- short circuit

Causes:

- contact with, touching or standing too close to uninsulated power and live parts
- use of uninsulated tools
- exposed electricity supply terminals following insulation failure
- inadequate safety checks following repair work
- incorrect fusing

Safety options:

- Isolate machinery and equipment designated for repair or maintenance work before commencing such work.
- First check isolated parts for voltage.
- Regularly check electrical fittings.
- Replace loose or damaged cables immediately.
- Always replace blown fuses with fuses of the correct type/value.
- Avoid contact with or touching live terminals.
- Only use insulated tools.

0.4.3 Sound pressure level

Tests on the chain hoist sound level are performed at a range of 1, 2, 4, 8 and 16 metres from the centre of the electric chain hoist motor to the measuring device. Measurement of SPL per DIN 45635.

The sound pressure level was measured:

- a) During operation of electric chain hoists on factory site.
- b) During open-air operation of electric chain hoists.

Table 0-1 Sound pressure level

Measuring distance		1 m	2 m	4 m	8 m	16 m
Series	Measurement type	dBA				
LPM 250, LPML 250	a	65	62	59	56	53
	b	65	59	53	47	41
LP 500, LPL 500	a	60	57	54	51	48
	b	60	54	48	42	36
LP 500 1Ph, LPM 250 1Ph	a	76	73	70	67	64
	b	76	70	64	58	52
LP 1000, LPL 1000, LP 1000 1Ph	a	75	72	69	66	63
	b	75	69	63	57	51
LP 1600/2500	a	75	72	69	66	63
	b	75	69	63	57	51



When working in a noisy environment, the use of ear protection is recommended.

0.5 Technical status

This instruction manual was issued in 2019. It corresponds to directive 2006/42/EC of the European Parliament and council of 17 May 2006 (including its amendments). The LP models are calculated for the case of operation with a shock factor of 1.4 (per EN 818-7 with max. 8 m/min.). The accidents audited by the laboratory generate smaller shock factors than the normal mode.

0.5.1 Periodic checks

Each device/unit operator should adequately note all checks, maintenance and inspections performed in the inspection pass, and have these confirmed by the competent person in charge. Incorrect or missing entries will lead to forfeiture of the manufacturer's warranty.



The devices are to be checked periodically by a specialist. Primarily, visual and functional checks are to be carried out, whereby the state of components with respect to damage, wear, corrosion or any other changes is determined. In addition, safety equipment is assessed for completeness and efficiency. It may be necessary to dismantle the equipment to correctly assess wear parts.



Load-bearing parts must be inspected over their entire length, including covered or hidden parts.



All periodical inspections should be arranged by the operator.

0.5.2 Warranty

The warranty is void if the installation, operation, testing and maintenance is not carried in accordance with this instruction manual. Repairs and troubleshooting under warranty may only be carried out by qualified persons after consultation and agreement with the manufacturer/supplier. Any modifications to the product or the use of non-original spare parts will void the warranty.

0.6 Appropriate use

The electric chain hoists of the LP types are lifting equipment for various loads. They can be installed as stationary or mobile units, while a lateral oscillation must be ensured. The electric chain hoists are manufactured in accordance with the latest technical developments and recognised safety standards, and are tested for safe operation by the manufacturer. Electric chain hoists are approved by various international classification societies such as TÜV and others. Electric chain hoists of the above types may only be used when in an acceptable technical condition, in accordance with their intended use, by trained personnel in a safe and responsible manner.

General operating conditions:

- Ambient temperature : -15 °C to +50 °C
- Humidity..... : max. 80% relative humidity
- Protection class : IP 65
- Electromagnetic compatibility..... : Immunity, industrial area

We recommend to equip GIS chain hoists working outdoors with a shelter to protect against the weather. Special operating conditions can be agreed in individual cases with the manufacturer. After consultation, appropriate, optimised equipment, and important information for safe, low-wear use can be supplied. The intended use of the electric chain hoist likewise assumes the adherence to the operating, maintenance and servicing prescribed by the manufacturer.

Ensure that only one type of electric chain hoist from the same manufacturer with the same lifting speed is used to lift each assembly. Electric chain hoists with different lifting capacities/speeds should not be used for the same manipulation. Note that electric chain hoists with different lifting capacities can run at different speeds even if the same lifting speed is cited on the type plate.

The electric chain hoists in the LP series are designed for provision and use at events. Events include concerts, shows, events, conventions, conferences, exhibitions, presentations, demonstrations, cinema or television recordings and the like. Venues include theatres, multi-purpose halls, studios, production facilities for film, television and radio, concert halls, convention centres, schools, exhibitions, trade fairs, museums, discos, variety shows, theme parks, sports facilities, open air theatres and open-air events.

The IGWW (entertainment technology industry association) differentiates between three types of electric chain hoists:

D8 electric chain hoist

In the context of this quality standard, a D8 electric chain hoist complies with the requirements stipulated in EN 14492-2 and shall not be used for holding or moving loads above people without employing additional protective measures.

D8 PLUS electric chain hoist

In the context of this quality standard, a D8 PLUS electric chain hoist has been designed, dimensioned and equipped such that it can be used for holding loads above people.

C1 electric chain hoist

In the context of this quality standard, a C1 electric chain hoist complies with the requirements stipulated in DIN 56950-1 and can in principle be used for holding or moving loads above people.

Electric chain hoists are offered in a variety of types and equipment variants and with different safety devices. Therefore, the choice of the chain hoist is of considerable importance. Here, the hazards resulting from the type of use are to be used as a basis whilst also taking the specific conditions of use into account. The selection of the type of the electric chain hoist is dependent on the operating conditions.

Table 0-2 Operating conditions

With persons present under the load				
Use	D8	D8 with secondary safety device	D8 PLUS	C1
Assembly and dismantling, set up mode	inadmissible	inadmissible	inadmissible	permissible
Holding loads	inadmissible	permissible	permissible	permissible
Scenic movement	inadmissible	inadmissible	inadmissible	permissible


The LPML/LPL types of the electric chain hoists are manufactured only as D8 versions. They can be operated both individually and in groups.

Improper use comprises:

- exceeding the defined maximum permissible load capacity
- pulling the load diagonally (maximum angle 4°, see figure 0-6)
- heaving, pulling or dragging the load
- transporting persons
- transporting excessive loads
- pulling on the control cable
- failing to observe the load hook constantly
- running the chain over edges
- failing to observe the load constantly
- allowing the load to fall due to a slack chain
- use in an explosive environment

Refer also to chapter 0.3.

Figure 0-6

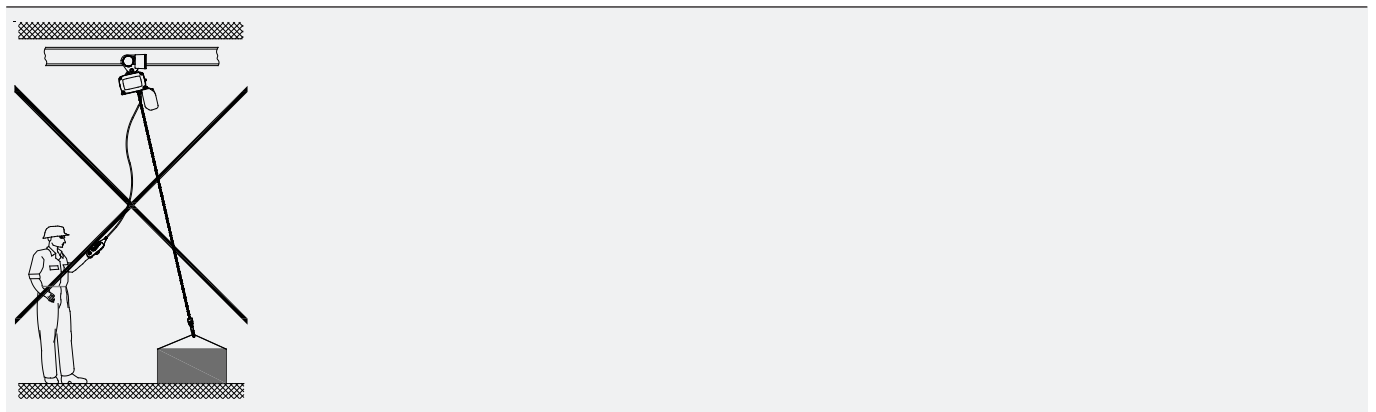

Excessive inching operations, slack chains and driving against the limit stops should be avoided. The loads shall be lifted off the ground with the lowest available lifting speed (per EN 14492). If these instructions are not followed, the manufacturer accepts no liability for damage to equipment and third parties caused by such actions.

0.6.1 Use of the instruction manual

This instruction manual includes the following chapters:

- | | |
|-----------------------|---|
| 0 General information | 3 Care and maintenance |
| 1 Description | 4 Measures for achieving safe operating periods |
| 2 Start-up | 5 Appendix |

Supplementary to the instruction manual, the following documentation from the operator must be noted:

- Declaration of conformity
- Inspection pass
- Spare parts list(s)
- Circuit diagrams

Page and figure numbering:

The pages are consecutively numbered. Blank pages are not numbered, however are calculated together with the consecutive pages.

Figures are numbered consecutively by chapter. Example: Figure 3-1 means: in chapter 3, figure 1.

1 Description

The LP series includes the following models: LPM, LPML, LP, LPL.

1.1 Operating conditions

Classification according to application requirements:

Electric chain hoists and trolleys are categorised in accordance with the following regulations into classifications:

- EN 14492-2 (A5 = 125,000 cycles)
- ISO 4301-1 (M5 = 1 600 h)
- DIN 15401 / EN 13001 (load hook)
- Remarks about general overhaul (see chapter 4)

There is different coefficient data for the classifications that must be adhered to in operation.



The travel trolley must have at least the same lifting capacity as the electric chain hoist.







The classification of the electric chain hoist can be found on the data plate.

The manufacturer will only guarantee the safety and lasting operation of the electric chain hoist when used for applications in accordance with valid standard values that fall within its classification.

Before the initial start-up, the user must estimate according to the parameters in table 1-1, which of the four types of load is applicable to the use of the electric chain hoist during its whole life cycle. The table 1-2 shows standard values for the operating conditions of the classifications depending on the type of load and time of operation.

Table 1-1 Load spectrums

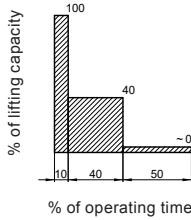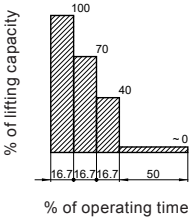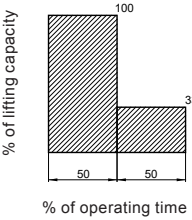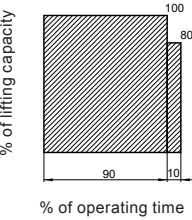Load type Q2 light $Q < 0.50$ $Q = 0.50$	Load type Q3 medium $0.50 < Q < 0.63$ $Q = 0.63$	Load type Q4 heavy $0.63 < Q < 0.80$ $Q = 0.80$	Load type Q5 very heavy $0.80 < Q < 1.00$ $Q = 1.00$
			
Full load only by way of an exception, however predominantly low loads	Often fully loaded, however continuously lightly loaded	Frequently fully loaded, continuous average loading	Regularly fully loaded

Q = Load spectrum (type of load)

Table 1-2 Operating conditions

Classification according to EN 14492-2 (ISO 4301-1)	A3 (M3)	A4 (M4)	A5 (M5)	A6 (M6)
Load spectrum	Number of cycles per working day (hoisting classes Dh2 - Dh5, lifting speed 8 m/min)			
Q2 - light $Q < 0.50$	120	240	480	960
Q3 - medium $0.50 < Q < 0.63$	60	120	240	480
Q4 - heavy $0.63 < Q < 0.80$	30	60	120	240
Q5 - very heavy $0.80 < Q < 1.00$	15	30	60	120

Ascertaining the correct type of application for an electric chain hoist:

Either the operating time or expected type of load can be used as a basis for ascertaining the correct type of application for the electric chain hoist.



Before initial start-up of the electric chain hoist, it is necessary to ascertain which of the load types in table 1-1 applies to the operation of the electric chain hoist. Assignment to a load type or a load spectrum (Q) applies for the whole service life of the equipment and may not be altered for operational safety reasons.

Example 1: Calculate permissible operating time of the electric chain hoist


An electric chain hoist of the classification A4 is to be used for medium stress load tasks throughout its whole calculated service life. This corresponds to the type of load "Q4 heavy" (see table 1-1). Corresponding to the values in table 1-2, the electric chain hoist should not be used for more than 60 cycles per day.

Example 2: Calculate the permissible type of load

An electric chain hoist of the classification A5 is to be used for approximately 400 cycles per working day, throughout its whole service life. Thus, the electric chain hoist must be operated in accordance with the characteristics of the type of load 'Q2 light' (see table 1-1).

1.2 General description

Figure 1-1

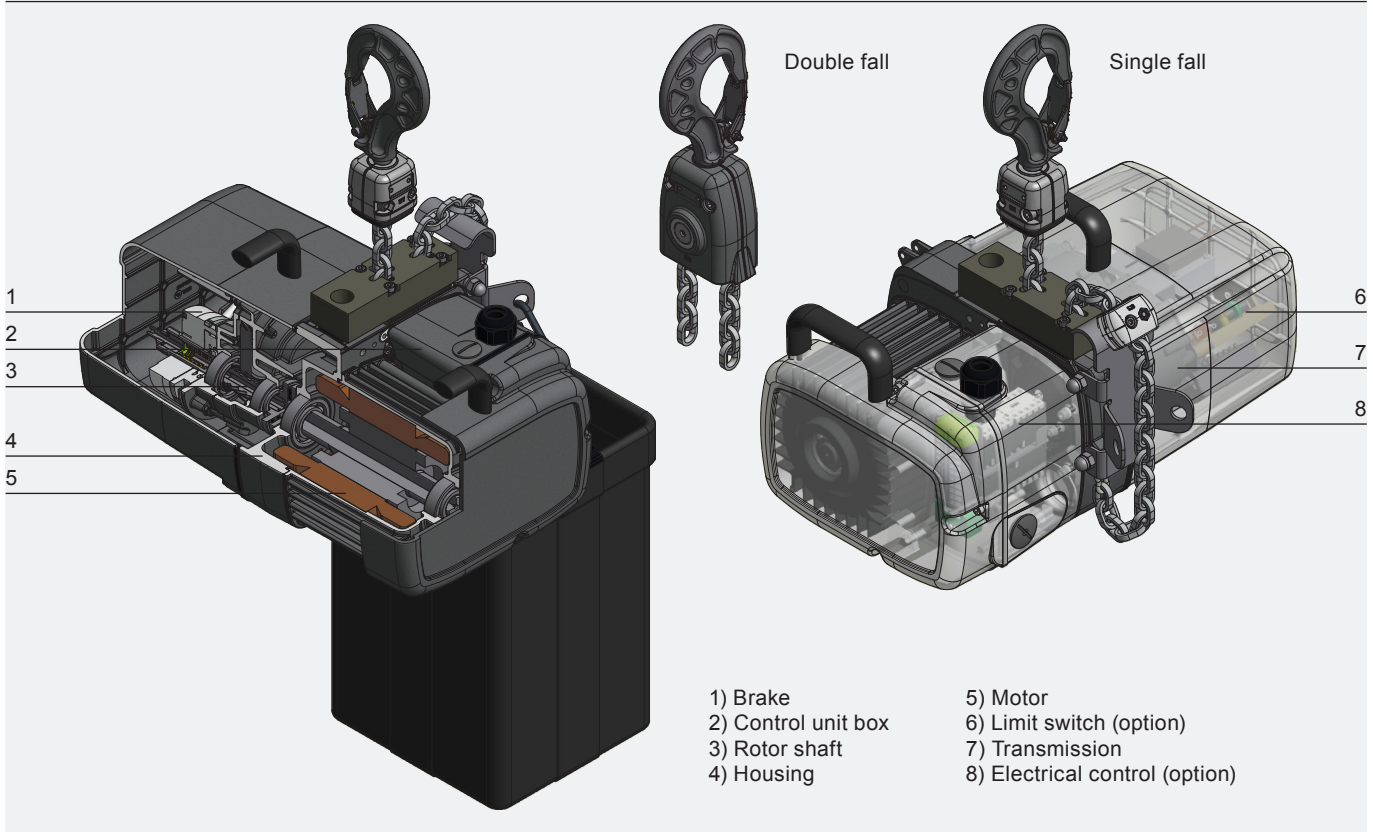

The electric chain hoist meets the requirements of the EC Machinery Directive and the harmonized EN standards. Housing and cover of the electric chain hoist are made of a sturdy die-cast aluminium. Cooling fins on the attached motor ensure optimum cooling. The chain container can be attached to the compactly constructed housing. A drilled hole is provided for the power supply cable gland and for the cable gland for the control cable. The eyebolt suspension or optional hook suspension are attached on the housing. The electric chain hoists of the LP series are suitable for use as a climbing hoist. Two carrying handles (figure 1-2) facilitate the transport of the chain hoists. GIS electric chain hoists are driven by asynchronous motors. The braking system consists of one (D8) or two (D8 PLUS, C1) DC-operated magnetic brakes. When there is no current, pressure springs generate the braking torque.

The slipping clutch is installed in front of the braking system due to its function. It protects the chain hoist from overload and takes on the function of an emergency stop for the highest and lowest hook positions. The electric chain hoists of the LP series are suitable for direct control.

The high tensile profile steel chain corresponds to grade DAT (8SS) per EN 818-7. The chain wheel is hardened. The load hook, which complies with DIN 15401 / EN 13001, is fitted with a safety catch. The 3-stage enclosed spur gears are generally helical. The gears are mounted on roller bearings and run with grease lubrication.

Additional equipment of D8 PLUS electric chain hoists (only available with the LPM/LP models):

- static safety factor of at least 8 with regard to fracture, in accordance with DIN 56950 (at least 8 per IGWW SQ P2)
- second parallel brake (figure 1-3)

Additional equipment of C1 electric chain hoists (only available with the LP model):

- static safety factor of at least 8 with regard to fracture per DIN 56950
- second parallel brake (figure 1-3)
- geared limit switch with downstream emergency limit switch (figure 1-4, Pos. 1)
- incremental encoders on the chain wheel (figure 1-4, Pos. 2)
- suspension with integrated load sensor (figure 1-5)

Options:

- integrated contactor control with or without emergency stop contactor (figure 1-6)
- safety load hooks (figure 1-7)
- absolute encoder

Figure 1-2

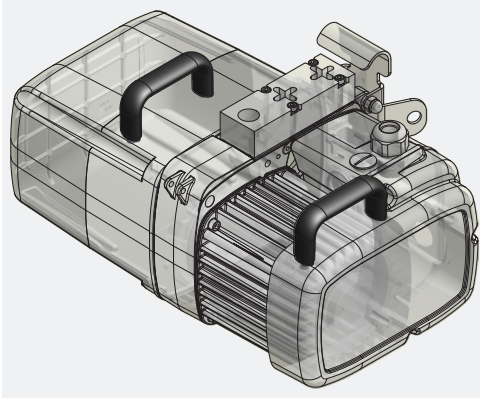


Figure 1-3

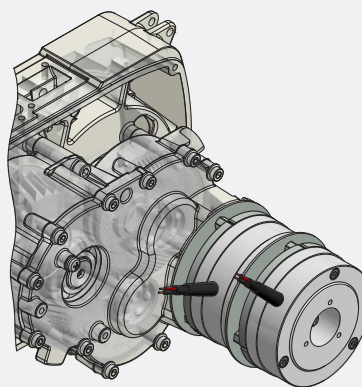


Figure 1-4

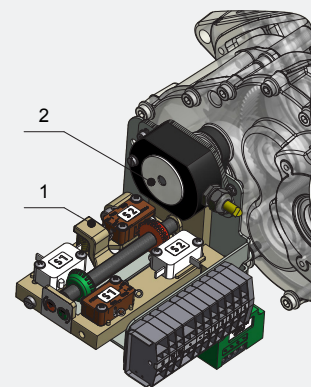


Figure 1-5

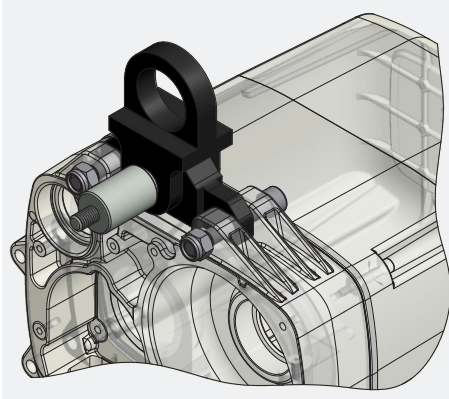


Figure 1-6

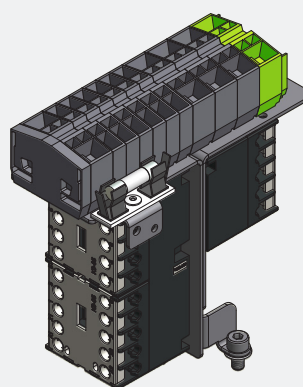


Figure 1-7



2 Start-up



Mechanical adjustments may only be performed by authorised specialists.



Operating staff must carefully read the instruction manual of the electric chain hoist before initial start-up and carry out all the checks. The device shall be put back into operation only after operational safety has been established. Unauthorised persons may not operate the device or carry out work with it.



The operator must create an inspection pass during the commissioning of the electric chain hoist. The inspection pass contains all the technical data and the date of commissioning. It provides a record of all servicing and maintenance work.

2.1 Transport and assembly

The safety directions for handling with loads should be followed (see chapter 0.3) when transporting and assembling the electric chain hoist. Electric chain hoists must be assembled by qualified staff, always bearing in mind the accident prevention directions in chapter 0.2. Before assembly, the electric chain hoist must be stored in an closed room or covered area. Should the electric chain hoist be destined for operation outdoors, then it is recommended that a protective cover is erected to shield it from the effects of the weather.

Wherever possible, the electric chain hoist should be transported in its original packaging. The goods delivered should be checked for completeness and the packaging disposed in an environmentally sound manner. It is recommended that the electric chain hoist is assembled and connected on-site by qualified personnel. Use the type plate to check whether the electric chain hoist corresponds to the version ordered (D8 / D8 PLUS / C1).

The electric chain hoist must have the following identification:

- Electric chain hoist D8..... : Triangle
- Electric chain hoist D8 PLUS..... : Square
- Electric chain hoist C1..... : Circle

2.2 Connections

2.2.1 Electrical connections



Electrical installations may only be performed by authorised specialists.

The mains connection cable, the mains connection fuse and the main switch for connecting the electric chain hoist to the mains power supply must be provided by the customer. A 4-wire cable with a PE protective conductor is needed as a supply line for three-phase versions. A 3-wire cable with a protective conductor is adequate for single-phase version. The length and cross-section must be appropriate for the power consumption of the electric chain hoist. The wiring diagram is located in the lid of the electric chain hoist. In D8 PLUS electric chain hoists, the power supply must be interrupted by means of a lockable switch, after reaching the desired position.

The control system must be fitted with an emergency stop button for monitoring. The power supply should be disconnected if the electric chain hoist is not in use. Only experienced and competent users may operate lifting systems or individual electric chain hoists.

The principles per BGG 912/GUV-G 912 are to be applied. An inspection pass is to be created consisting of the installation documentation from the manufacturer and the test records. Plans and descriptions for electrical installation are to be supplemented by the corresponding control system constructor on a project-specific basis. An inspection pass is to be created consisting of the installation documentation from the manufacturer and the test records. Plans and descriptions for electrical installation are to be supplemented by the corresponding control system constructor on a project-specific basis.

- Before connecting the electric chain hoist, check whether the operating voltage and frequency specified on the type plate correspond to the available power supply.
- Remove the cover from the control unit box.

Connection with direct control:

- Introduce the connection cable with cable gland M25 × 1.5 through the lower hole and connect in accordance with the attached electrical chart to L1, L2, L3 and PE (see figure 2-1).
- With direct operated chain hoists without PMS relay contact is provided for connection of the brake. The brake must be switched on the direct current side.

Connection with contactor control:

- Introduce the connection cable with cable gland M25 × 1.5 through the lower hole and connect in accordance with the attached electrical chart to L1, L2, L3 and PE (see figure 2-2).
- Introduce the control cable through cable gland M20 × 1.5 in the hole below the housing and connect to terminals 1, 2, 3, 4, 10 (see figure 2-3).

When using a control switch:

- Strain relief to housing (see figure 2-4).
- Re-fit the cover from the control unit box.



- To maintain the predetermined protection class IP 65, all cables must fit into the corresponding cable glands and the cover screws must be tightened after the connection with the torque specified in table 3.2.9.
- The control switch must be attached to the strain relief cord and not to the cable.



The protective conductor should not conduct any current during operation. With the installation of a motor protection breaker, the current of the electric chain hoist must be observed in accordance with the type plate.

Figure 2-1

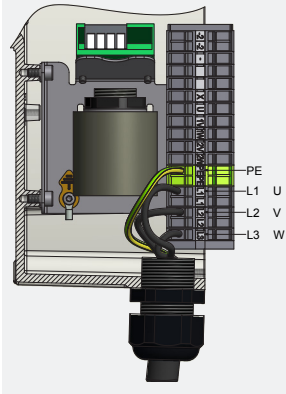


Figure 2-2



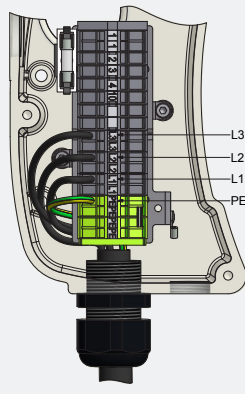


Figure 2-3

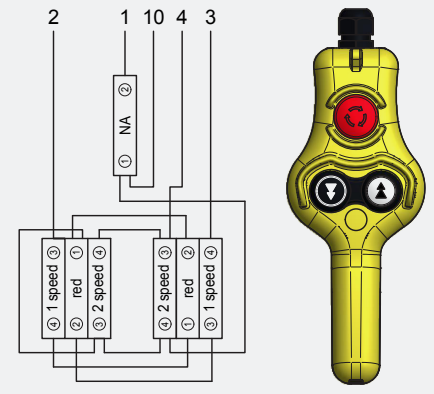

- Checking direction of rotation: If the directions of movement do not match the button symbols of the control switch, the supply line wires L1 and L2 must be transposed.
- In the single-phase version, inching operations can cause malfunctions.

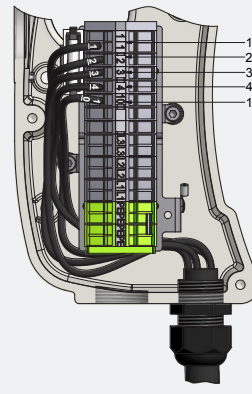

Open the terminal used in accordance with figure 2-5.

Figure 2-4


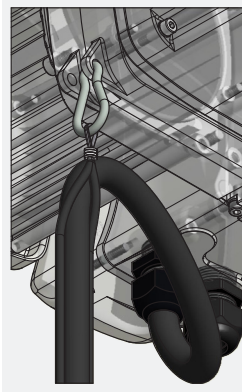


Figure 2-5

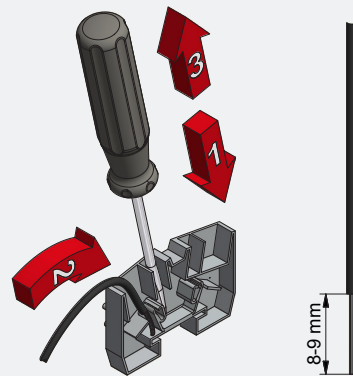

2.2.2 Brake system

The brake must be able to hold the nominal load in power free mode without any problems. For chain hoists with two brakes, the functionality of the two brakes must be checked during the system acceptance test. The first brake is on the DC side, the second brake on the AC side and thereby switches with a slight delay.

The functional testing of the brake system is carried out under nominal load:

First brake:

Release the mounting screws of the second brake. The rotor of this brake now rotates freely. The function of the second brake is disconnected. Raise and lower: The first brake must be capable of braking and hold the nominal load. Tighten the mounting screws again after the function test.

Second brake:

Electrical Method:

The first brake is released from + and - terminals and activated by a non-controlled current source (directly from L1 and L2). To activate a rectifier must be switched between. Thus, the first brake is disconnected and the second brake can be tested by lifting and lowering the load. Lifting and lowering with unloaded first brake: The second brake must be capable of braking and hold the nominal load. After the function test reconnect the first brake to the terminals + and -.

Mechanical method:

With a tool, the pressure ring of the first brake is pressed to the solenoid, so that the rotor of the brake can rotate freely. The function of the first brake is disconnected. Lifting and lowering with unloaded first brake: The second brake must be capable of braking and hold the nominal load.


2.2.3 Load chain



- Only use original chains.
- Welding seam of the chain links must face inward on the chain wheel (see figure 2-6).
- When used as a climbing hoist, make sure that the entry and the run-out of the chain is not prevented by chain clusters.
- The geared limit switch must be mechanically deactivated for pulling in the chain, see chapter 2.2.4.

Before start-up and during operation, the load chain must be oiled along its full length. Oil must constantly be present on the internal, contacting and rubbing surfaces of the chain links. Lubrication is carried out by submersion or with an oil can, using a creeping gear oil. The end of the chain (1) should be attached to a flexible piece of wire or chain pulling loop (2) and fed through the chain wheel (3) of the electric chain hoist. Through short switching impulses, the chain will be pulled in accordance with figure 2-6. The lifting height must be adjusted such that the hook fittings lie on the ground in the lowest hook position.

Figure 2-6

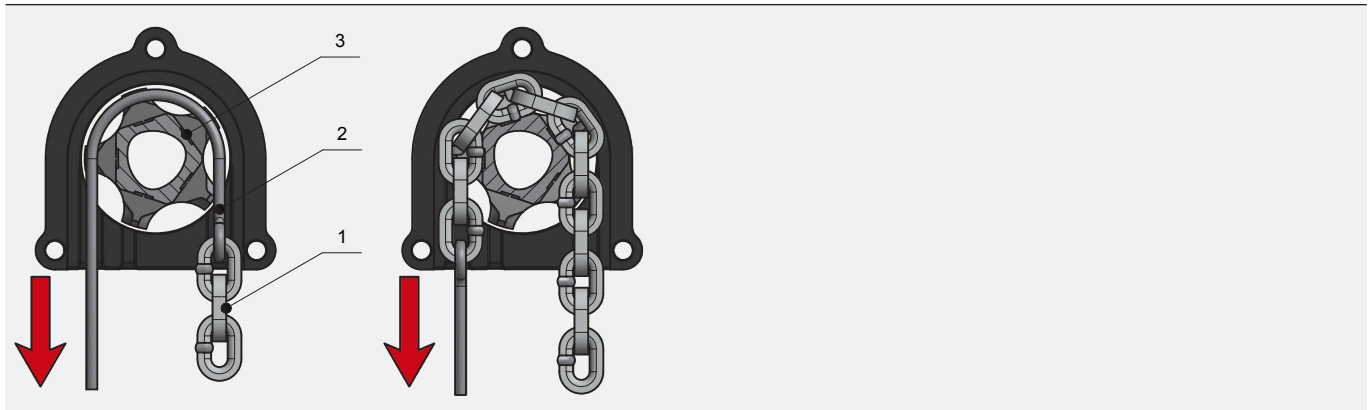

Chain end:

The chain end is to be fixed to the housing in accordance with figure 2-7 or figure 2-8 and the limit stop in accordance with figure 2-9. Ensure that the end of the chain is not twisted. The section of chain after the limit stop (1) must be adjusted to the height of the chain container. Here, the length of the chain section must be selected such that the limit stop lies on the floor of the container when the chain is pulled into it (see figure 2-10).

1 fall operation:

The load hook (1) is connected to the chain with a single fall hook clamp (2). For the power transmission, the mounting of the bolt (3) is important (see figure 2-11).



- Note correct arrangement of suspension (mass k1, see figure 2-12 or for LP 1600/2500 see figure 2-13): LPM/LPML 250 = symmetrical, LP/LPL 500 = 41 mm, LP/LPL 1000 = 43 mm, LP 1600/2500 = 87 mm.
- Grease the bearings thoroughly (load hook).

Figure 2-7

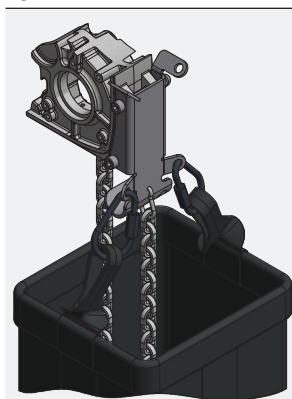


Figure 2-8

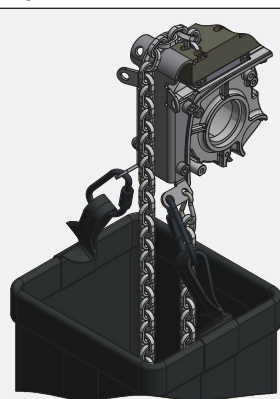


Figure 2-9

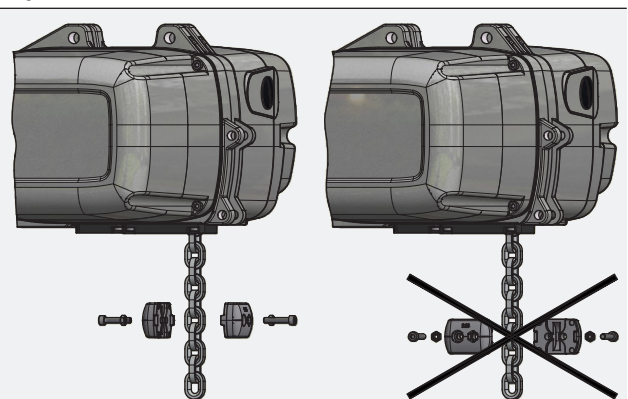


Figure 2-10

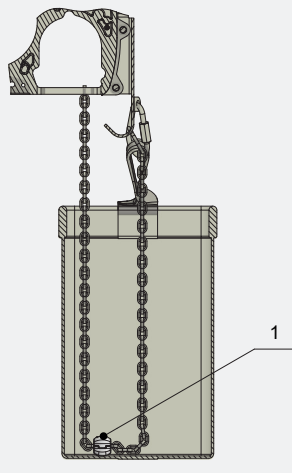


Figure 2-11


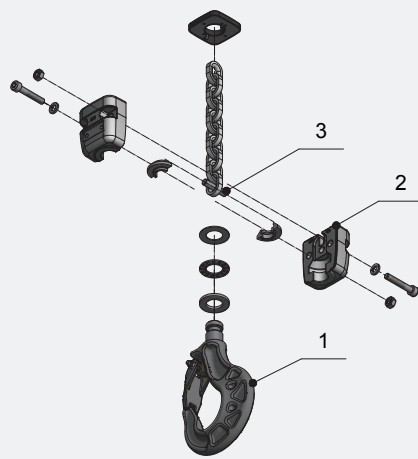


Figure 2-12



Figure 2-13

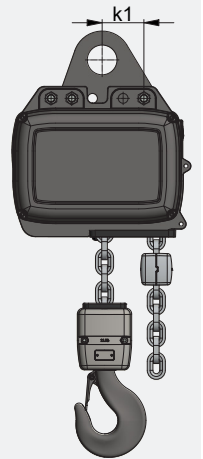

Double fall operation (only available with the LP 2500 model):

Fit load hook (1) with double fall hook clamp (2) in accordance with figure 2-14. Connect load-side chain end with the chain holder (3) and fasten into the guide rail of the housing. Secure the chain holder with screw (4) and spring washer (5).



- Note correct arrangement of suspension (mass k2, see figure 2-15): LP 2500 = 130 mm.
- No longitudinal twisting of the chain (see figure 2-16).
- Grease the bearings thoroughly (deflection roller, load hook).

Figure 2-14

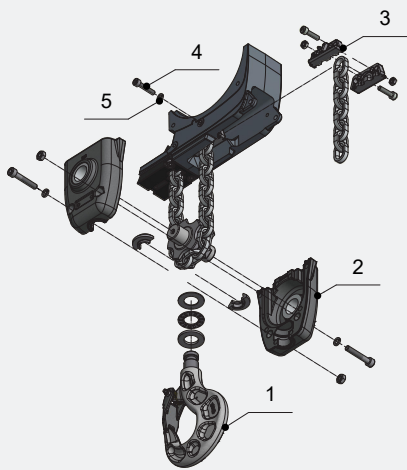


Figure 2-15


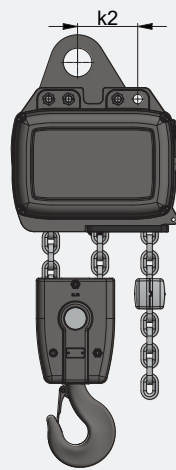


Figure 2-16



2.2.4 Limit switch

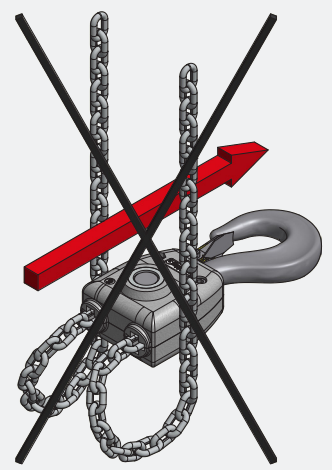

In direct-controlled electric chain hoists no limit switch is installed. It is important to ensure that is not driven against the housing during operation. The geared limit switch of the contactor controlled electric chain hoist is only allowed for control voltage up to 230 V AC.

In electric chain hoists with contactor control, a geared limit switch is built in as standard. This is also suitable as a regular limit stop with high switching precision. The limit switch function (highest and lowest hook position) must be tested during start-up. Four different transmissions are available depending on the lifting height:

LPM/LPML 250			
Transmission	Colour	1 fall lifting height [m]	2 falls lifting height [m]
i = 1:1	black	14	-
i = 1:1.5	red	21	-
i = 1:3	yellow	42	-
i = 1:6	blue	90	-

LP/LPL 500			
Transmission	Colour	1 fall lifting height [m]	2 falls lifting height [m]
i = 1:1	black	19	-
i = 1:1.5	red	28	-
i = 1:3	yellow	57	-
i = 1:6	blue	114	-

LP/LPL 1000			
Transmission	Colour	1 fall lifting height [m]	2 falls lifting height [m]
i = 1:1	black	30	-
i = 1:1.5	red	45	-
i = 1:3	yellow	90	-
i = 1:6	blue	192	-

LP 1600			
Transmission	Colour	1 fall lifting height [m]	2 falls lifting height [m]
i = 1:1	black	34	-
i = 1:1.5	red	51	-
i = 1:3	yellow	102	-
i = 1:6	blue	204	-

LP 2500			
Transmission	Colour	1 fall lifting height [m]	2 falls lifting height [m]
i = 1:1	black	42	21
i = 1:1.5	red	63	31.5
i = 1:3	yellow	126	63
i = 1:6	blue	252	126

Adjustment description (see figure 2-17):

- Provision only with model LPM/LPML 250: Loosen screws (1 + 2) and turn clamping strip (3) away (see figure 2-18).
- The geared limit switch must be deactivated mechanically by pressing the rocker switch (1) before drawing the chain in or when changing the chain.
- Draw the chain in.
- Move to the highest hook position and turn the red switch wheel (2, rear) until it reaches the switch cam on the top limit switch (3) (turn clockwise for the lowest hook position and anticlockwise for higher hook positions).
- Activate the rocker switch (1) (the rocker switch must latch into the switch wheel).
- Move to the lowest hook position, press the rocker switch (1) and turn the green switch wheel (4, front) until it reaches the switch cam on the bottom limit switch (5) (turn clockwise for the lowest hook position and anticlockwise for higher hook positions).
- Activate the rocker switch (1) (the rocker switch must latch into the switch wheel).



- Check the limit switch function: the limit stop and the bottom hook block may not touch the housing.
- Check emergency limit switch: if the downstream emergency limit switch (6) is triggered, the control voltage phase is interrupted. A further lifting movement is therefore only possible if the emergency limit switch is bridged.

2.2.5 Chain container

- Textile chain containers are suitable for vertically mounted electric chain hoists and for climbing hoists.
- Attach the free end of chain to housing (see chapter 2.2.3).
- Fit the chain container and allow the chain to run in: Vertically mounted chain hoists (LPM/LPML 250 see figure 2-19, LP/LPL 500 see figure 2-20, LP/LPL 1000 see figure 2-21, LP 1600/2500 see figure 2-22) or climbing hoists (LPM/LPML 250 see figure 2-23, LP/LPL 500 see figure 2-24, LP/LPL 1000 see figure 2-25, LP 1600/2500 see figure 2-26).



Chain container must hang freely. Badly lubricated chains will occupy more volume in a chain container. We recommend filling to a maximum of 50% to 70%. With climbing hoists, ensure that the chain runs over the curvature of the chain holder.

Figure 2-17

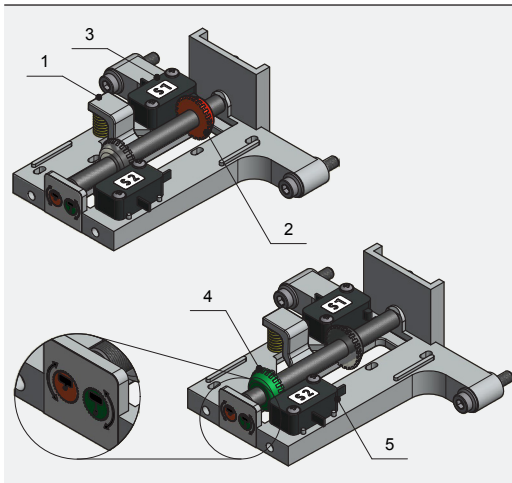


Figure 2-18

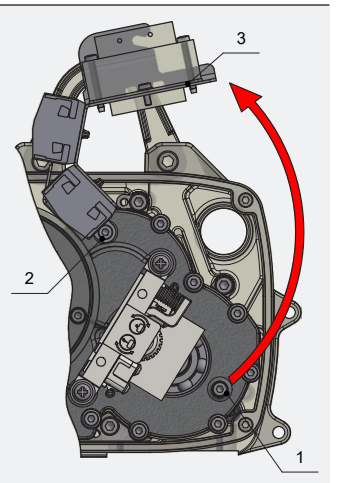


Figure 2-19

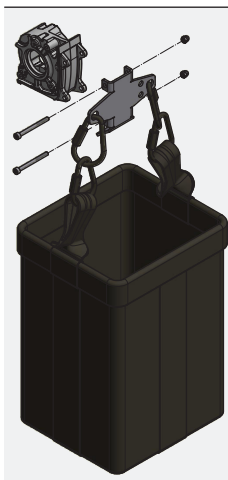


Figure 2-20

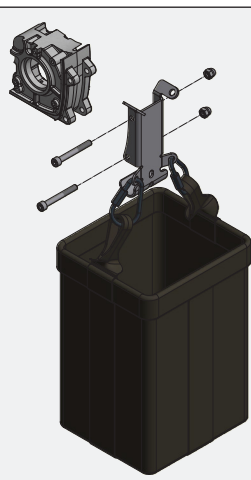


Figure 2-21

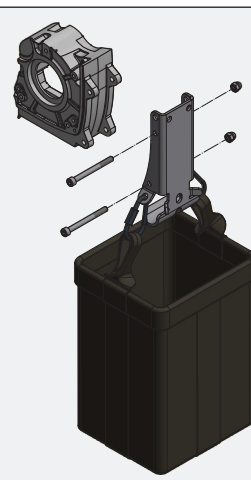


Figure 2-22

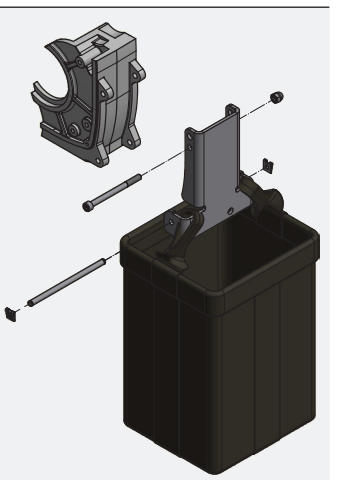


Figure 2-23

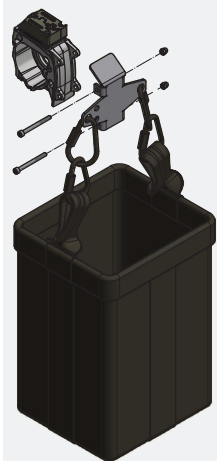


Figure 2-24

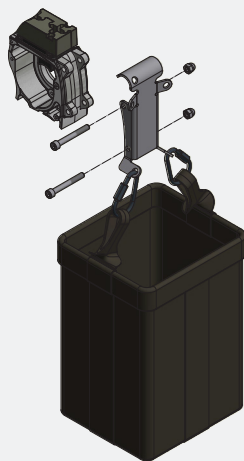


Figure 2-25


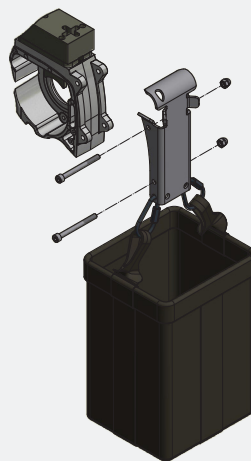


Figure 2-26

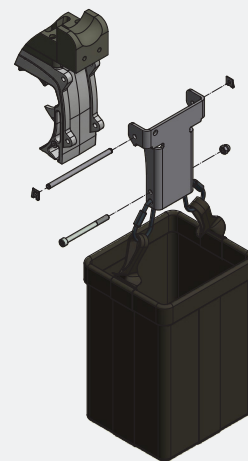

3 Care and maintenance

3.1 General guidelines for maintenance and repair

Operating failures in electric chain hoists affecting the safe operation of the device should be remedied immediately.



Maintenance and repair work on the electric chain hoist may only be carried out by qualified and trained personnel.



If the operator performs maintenance work on an electric chain hoist on their own, the type of maintenance performed together with the date carried out must be entered in the inspection pass.

Alterations, as well as modifications and additions to electric chain hoists, which may affect safety, must be authorised by the manufacturer in advance. Structural alterations to chain hoists not authorised by the manufacturer exempt the manufacturer from liability in the event of damage. Material warranty claims will only be recognised as valid if original manufacturer's spare parts are used exclusively. We explicitly advise that original parts and accessories not delivered by us are also not checked or approved by us.

General:

Care and maintenance tasks are preventive measures designed to preserve the full functionality of electric chain hoists. Non-compliance with care and maintenance routines can result in limited use and damage to electric chain hoists.

Care and maintenance should be carried out in accordance with the instruction manual at predefined time intervals (table 3-1 and 3-2). During care and maintenance work, general accident prevention directions, special safety directions (chapter 0.3) as well as hazard protection instructions (chapter 0.4) should be followed.



Care and maintenance work should be performed only on electric chain hoists with no loads. The main switch must be off. The hook fittings must lie on the ground or on the maintenance platform.

Care work encompasses visual checks and cleaning routines. Maintenance work includes additional functional checks. During the functional checks, all fixing elements and cable clamps must be checked for tightness. Cables must be inspected for dirt, discolouration and arc spots.



Used operating materials (oil, grease, etc.) should be safely collected and disposed of in an environmentally friendly manner.

Care and maintenance intervals are defined as follows:

d (daily), 3 m (quarterly), 12 m (annually)

The predefined care and maintenance intervals should be reduced when the loading of the electric chain hoist is exceptionally large or when frequently operated in adverse conditions (e.g. dust, heat, humidity, steam, etc.).

3.2 Care and maintenance

3.2.1 Care overview

Table 3-1 Care overview

Designation	d	3 M	12 M	Task	Remark
1. Load chain	x			Visual check Clean and lubricate as needed	see chapter 2.2.3
2. Lifting device and trolley	x			Check for abnormal noise / sealing	
3. Electric power supply cable	x			Visual check	
4. Limit switch	x			Function check	see chapter 2.2.4
5. Sealing		x		Visual check	
6. Strain relief control cable	x			Visual check	

3.2.2 Maintenance overview

Table 3-2 Maintenance overview

Designation	d	3 M	12 M	Task	Remark
1. Load chain		x	x	Oil Measure wear	see chapter 2.2.3 / 3.2.4
2. Brake system	x		x	Function check with load	see chapter 3.2.3
3. Electrical equipment			x	Function check	
4. Fixing screws on suspension parts and load hook with accessories			x	Check for cracks Check screw torque	see chapter 3.2.9
5. Limit switch			x	Check switching elements	see chapter 2.2.4
6. Slipping clutch			x	Function check	see chapter 3.2.8
7. Leaktightness			x	Check screw torques of the covers Check cable glands	see chapter 3.2.9

3.2.3 Brake system

The spring-loaded brake is a solenoid-operated, single disc brake with two friction surfaces. The braking force is applied by springs. The braking torque is generated when no current is applied. The brake release is solenoid-operated. The brake operates with DC current. The brake must be able to hold the nominal load in power free mode without any problems. For chain hoists with two brakes, the functionality of the two brakes must be checked during the system acceptance test and tested periodically. The periodic examination takes place annually by a service technician certified by the manufacturer.

The function test is described in Section 2.2.2. The verifiability of individual brakes is ensured by the control system constructor. A pattern control scheme for a D8 PLUS electric chain hoist can be obtained from GIS.



The brake coil voltage must be the same as the operating voltage.



If the maximum air gap is reached (a max., table 3-3 and figure 3-1) reached, the lining and the brake disc must be replaced.

Table 3-3 Air gap

Designation		LPM/LPML 250	LP/LPL 500	LP/LPL 1000	LP 1600/2500
Nominal value air gap (a)	[mm]	0.3 (+0.1 / -0.05)	0.3 (+0.1 / -0.05)	0.3 (+0.15 / -0.05)	0.3 (+0.15 / -0.05)
Air gap (a max.)	[mm]	0.7	0.7	0.9	0.9
Holding torque	[Nm]	4	7	12	22.5
Screw tightening torque	[Nm]	3	3	7	10

3.2.4 Load chain

The load chain should be periodically checked for abrasion. The check is based on three measurements: see permissible wear values (table 3-4 and table 3-5) and measuring points (figure 3-2).



The chain should be replaced when the measurements no longer comply with those defined in the table. The chain wheel and chain guidance should be checked for wear at the same time and, where necessary, be replaced. Only use original chains. The chain links should not be welded.

The new chain is installed in accordance with chapter 2.2.3.



For ease of installation, the old chain and new chain can be connected by a piece of flexible wire.

Table 3-4 Load chain wear values

Designation		LPM 250	LPML 250	LP 500	LPL 500	LP 1000
Chain type d x t	[mm]	3.75 x 10.75	4.1 x 11.5	5.25 x 15	5.7 x 16	7.45 x 23
Limit values according to DIN 685, part 5, EN 818-7						
1. Measurement over 11 chain links, a = 11t	[mm]	120.6	129.0	168.3	179.5	258.1
2. Measurement over 1 chain link, 1t	[mm]	11.3	12.0	15.7	16.8	24.1
3. Measurement of the chain link diameter dm = d1 + d2 / 2 (dm min. = 0.9 x d)	[mm]	3.4	3.7	4.7	5.1	6.7

Table 3-5 Load chain wear values

Designation		LPL 1000	LP 1600	LP 2500	
Chain type d x t	[mm]	8.2 x 23.7	9.4 x 27.4	11.75 x 32.9	
Tolerances in accordance with DIN 685, part 5, EN 818-7					
1. Measurement over 11 chain links, a = 11t	[mm]	266.0	307.4	369.1	
2. Measurement over 1 chain link, 1t	[mm]	24.9	28.7	34.5	
3. Measurement of the chain link diameter dm = d1 + d2 / 2 (dm min. = 0.9 x d)	[mm]	9.1	8.5	10.6	

Figure 3-1


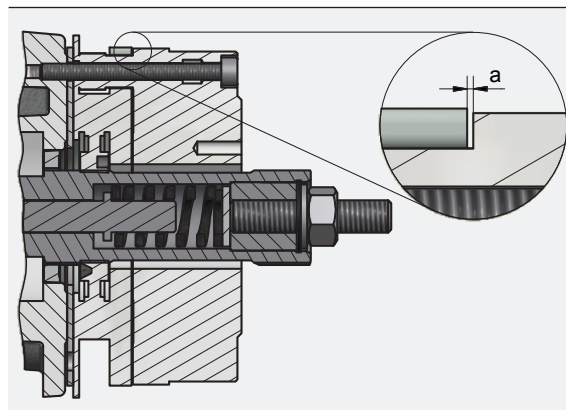


Figure 3-2



3.2.5 Chain guidance

The inlet openings of the chain are visually inspected.

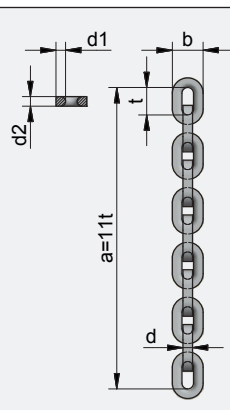

- Provision only with model LPML 250: screw tightening torque for two-part chain guidance 1.5 Nm.
- A damaged wear plate at the bottom of the housing must be replaced.

3.2.6 Limit stop

Check screw fittings at the limit stop and single fall hook clamp and tighten with the correct torque if necessary. See chapter 3.2.9 for guide values.

3.2.7 Transmission

The transmission has permanent lubrication.



The housing of the transmission may not be opened.

3.2.8 Slipping clutch

The slipping clutch is set to 125% at the factory and reliably prevents overloading of the chain hoist (the power limiting factor per EN 14492-2 is $\Phi_{DAL} = 1.6$). In the case of the two lowest lifting capacities in tables 5-1 to 5-5, the factor is ≤ 2 . The resultant forces arising from the adjustment of the slipping clutch must be able to be absorbed by the suspension parts. The coating is wear resistant.



Adjustment and testing of the slipping clutch may only be carried out by authorised personnel and must be recorded in the inspection pass. If the nominal load is no longer lifted, or there is delay in achieving the lifting speed, the slipping clutch must be adjusted.

3.2.9 Suspension parts

All statically loaded parts are considered to be suspension parts. The bearing surfaces of the slewing suspension parts must be periodically greased. Torque values for screws of strength class 8.8 per DIN ISO 898:

M 4	M 5	M 6	M 8	M 10	M 12
3.3 Nm	6.5 Nm	10 Nm	24 Nm	48 Nm	83 Nm




If hook or eyebolt shows damage, cracks, deformation or corrosion, it must be replaced. If the prescribed dimensions (min. / max.) no longer comply with table 3-6 and figure 3-3, the parts must also be replaced. The hook safety catch must be fully functional and fully closed, replace if necessary.

Table 3-6 Wear values suspension parts

Suspension part		LPM 250	LPML 250	LP 500	LPL 500	LP 1000	LPL 1000	LP 1600	LP 2500
Load hook	h [mm]	18.0	18.0	28.0	28.0	28.0	36.0	40.0	48.0
	h min. [mm]	17.1	17.1	26.6	26.6	26.6	34.2	38.0	45.6
Hook suspension	h [mm]	18.0	18.0	28.0	28.0	28.0	36.0	40.0	48.0
	h min. [mm]	17.1	17.1	26.6	26.6	26.6	34.2	38.0	45.6
Eyebolt suspension	h [mm]	11.0	11.0	15.0	15.0	20.0	20.0	29.0	29.0
	h min. [mm]	10.5	10.5	14.3	14.3	19.0	19.0	27.5	27.5
Hook opening	l [mm]	24.0	24.0	34.5	34.5	34.5	34.5	40.0	44.6
	l max. [mm]	26.4	26.4	37.9	37.9	37.9	37.9	44.0	49.0

Figure 3-3

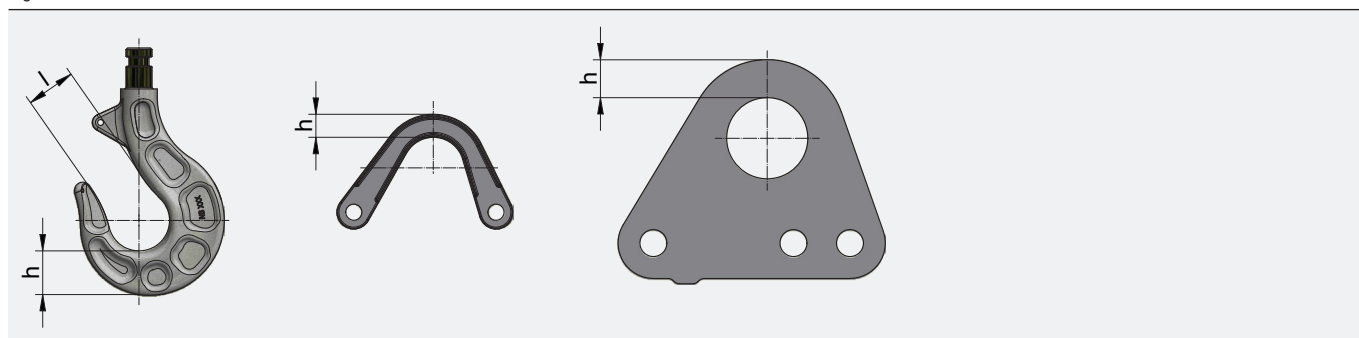

4 Measures for achieving safe operating periods

The statutory and health requirements of the EU regulations stipulate that specific dangers which may arise from fatigue or ageing must be prevented. Accordingly, operators of series lifting device are obliged to determine the actual use. This determination is easiest using the calculator on our website. The actual use is recorded as part of the annual inspection by customer service engineers. A general overhaul must be carried out when the theoretical full load cycles are reached, or after no more than 10 years. All checking and the general overhaul itself must be arranged by the operator of the lifting device.

The following theoretical operating full load cycles apply throughout the whole service life of electric chain hoists that are categorised per EN 14492-2, depending on the load spectrum:

Classification according to EN 14492-2 (ISO 4301-1)	A3 (M3)	A4 (M4)	A5 (M5)	A6 (M6)
Load spectrum	Number of load cycles throughout the whole service life			
Q2 = 0.50	250 000	500 000	1 000 000	2 000 000
Q3 = 0.63	125 000	250 000	500 000	1 000 000
Q4 = 0.80	63 000	125 000	250 000	500 000
Q5 = 1.00	31 500	63 000	125 000	250 000

4.1 Determining the actual operating time

The actual operating time depends on the daily operating cycles and the load spectrum. Operating cycles are determined from information provided by the operator or recorded using a meter that counts the number of operating cycles. The load spectrum is determined in accordance with table 1-1, page 11. With these both values, the annual use can be found in table 4-1. If an operating data acquisition system (BDE) is used, the actual use can be read out directly by our experts during the annual inspection.



The values periodically calculated or read-off are to be recorded in the inspection pass.

Example:

An electric chain hoist with A4 classification is used with the load type "Q4 heavy" (Q = 0.80, see table 1-1). Use per working day is 60 cycles. According to table 4-1, this results in a theoretical annual use of 6300 full load cycles. A theoretical operating period of 19.8 years can thus be derived from the theoretical total service life of 125,000 full load cycles. A general overhaul must be carried out after 10 years at the latest, during which the further use is determined.

Table 4-1 Annual use (208 working days / year)

Number of cycles per working day	<= 15 (15)	<= 30 (30)	<= 60 (60)	<= 120 (120)	<= 240 (240)	<= 480 (480)	<= 960 (960)	<= 1920 (1920)
Load spectrum	Annual use in full load cycles							
Q2 = 0.50	400	800	1 600	3 150	6 300	12 500	25 000	50 000
Q3 = 0.63	800	1 600	3 150	6 300	12 500	25 000	50 000	100 000
Q4 = 0.80	1 600	3 150	6 300	12 500	25 000	50 000	100 000	200 000
Q5 = 1.00	3 150	6 300	12 500	25 000	50 000	100 000	200 000	400 000

4.2 General overhaul

On reaching the theoretical full load cycles (no later than 10 years for recording without BDE), a general overhaul should be performed. This enables the equipment to continue operating safely for a further period of time. Components must be checked or replaced in accordance with table 4-2. The checking and release for the further use must be done by a specialist company authorised by the manufacturer or by the manufacturer themselves.

The inspector determines:

- What new theoretical full load cycles are possible.
- The max. period until the next general overhaul.

This data should be recorded in the inspection pass.

Table 4-2 General overhaul

Components of LP models, all types	Check for wear *	Replace
Brake	x	
Motor shaft	x	
Gear teeth		x
Roller bearing		x
Sealings		x
Chain	x **	
Chain wheel, chain guidance	x	
Suspension	x	
Load hook		x
Contactors, limit switch	x	

* replace if worn

** replace at the latest in general overhaul

4.3 Disposal

If the device can no longer be used, it must be disposed of in an environmentally safe manner. Lubricants, such as oils and greases, must be disposed in accordance with the applicable waste law. Metals and plastics are to be recycled.

5 Annex

5.1 Technical data

Table 5-1 Technical data LP D8 (three-phase version)

EN (ISO) classification	A3 (M3) 15 C/d (25% ED)	A4 (M4) 30 C/d (30% ED)	A5 (M5) 60 C/d (40% ED)	A5 (M5) 60 C/d (40% ED)	A5 (M5) 60 C/d (40% ED)	A5 (M5) 60 C/d (40% ED)	Lifting speed 50 Hz	Lifting speed 60 Hz	Motor type	Number of falls	Dead weight	Main fuse (400 V, slow-blow)
Series	Load capacity [kg]						[m/min]	[m/min]			[kg]	[A]
Chain safety	5:1	6.4:1	8:1	10:1	12.5:1	16:1						
LPM 250/1NL D8	400	320	250	200	160	100	4	4.8	71 A 4	1	12	6
LPML 250/1NL D8	500	-	-	-	-	-	4	4.8	71 A 4	1	12	6
LP 500/1NF D8	800	630	500	400	320	250	8/2	9.6/2.4	80 B 8/2	1	22	6
LP 500/1NL D8	800	630	500	400	320	250	4	4.8	80 A 4	1	22	6
LP 500/1N D8	800	630	500	400	320	250	8	9.6	80 B 2	1	22	6
LPL 500/1NL D8	1000	-	-	-	-	-	4	4.8	80 A 4	1	23	6
LP 1000/1NF D8	1600	1250	1000	800	630	-	8/2	9.6/2.4	100 B 8/2	1	49	10
LP 1000/1NL D8	1600	1250	1000	800	630	-	4	4.8	90 B 4	1	45	10
LP 1000/1N D8	1600	1250	1000	800	630	-	8	9.6	100 B 2	1	49	10
LPL 1000/1NL D8	2000	-	-	-	-	-	4	4.8	90 B 4	1	46	10
LP 1600/1NF D8	2500	2000	1600	-	-	-	8/2	9.6/2.4	100 C 8/2	1	76	16
LP 1600/1NL D8	2500	2000	1600	1250	1000	-	4	4.8	100 AL 4	1	72	16
LP 2500/1BF D8	-	3200	-	-	-	-	6.4/1.6	7.8/1.9	100 C 8/2	1	75	16
LP 2500/1NF D8	-	-	2500	-	-	-	8/2	9.6/2.4	100 C 8/2	1	75	16
LP 2500/1BL D8	-	3200	-	-	-	-	3.2	3.8	100 AL 4	1	71	16
LP 2500/1NL D8	-	-	2500	-	-	-	4	4.8	100 AL 4	1	71	16
LP 2500/1B D8	-	3200	-	-	-	-	6.4	7.8	100 C 2	1	74	16
LP 2500/2BF D8	-	6300	-	-	-	-	3.2/0.8	3.8/1	100 C 8/2	2	75	16
LP 2500/2NF D8	-	-	5000	-	-	-	4/1	4.8/1.2	100 C 8/2	2	75	16
LP 2500/2BL D8	-	6300	-	-	-	-	1.6	1.9	100 AL 4	2	71	16
LP 2500/2NL D8	-	-	5000	-	-	-	2	2.4	100 AL 4	2	71	16
LP 2500/2B D8	-	6300	-	-	-	-	3.2	3.8	100 C 2	2	74	16
Chain safety	10:1	12.5:1	16:1	20:1	25:1	32:1						
LPM 250/1SL D8	-	-	125	100	80	-	8	9.6	71 A 4	1	12	6
LP 500/1S D8 *	-	-	250	200	160	125	16	19.2	80 B 2	1	22	6
LP 500/1KL D8 *	-	-	250	200	160	125	16	19.2	80 A 4	1	22	6
LP 1000/1S D8 *	-	-	500	400	-	-	16	19.2	100 B 2	1	49	10
LP 1000/1KL D8 *	-	-	500	400	-	-	16	19.2	90 B 4	1	43	10
LP 1600/1SL D8	1250	1000	800	-	-	-	8	9.6	100 AL 4	1	72	16

* must be operated with a frequency inverter

Table 5-2 Technical data LP D8 PLUS (three-phase version)

EN (ISO) classification	A3 (M3) 15 C/d (25% ED)	A4 (M4) 30 C/d (30% ED)	A5 (M5) 60 C/d (40% ED)	A5 (M5) 60 C/d (40% ED)	A5 (M5) 60 C/d (40% ED)	A5 (M5) 60 C/d (40% ED)	Lifting speed 50 Hz	Lifting speed 60 Hz	Motor type	Number of falls	Dead weight	Main fuse (400 V, slow-blow)
Series	Load capacity [kg]						[m/min]	[m/min]			[kg]	[A]
Chain safety	5:1	6.4:1	8:1	10:1	12.5:1	16:1						
LPM 250/1NL D8 PLUS	-	-	250	200	160	100	4	4.8	71 A 4	1	13	6
LP 500/1NF D8 PLUS	-	-	500	400	320	250	8/2	9.6/2.4	80 B 8/2	1	23	6
LP 500/1NL D8 PLUS	-	-	500	400	320	250	4	4.8	80 A 4	1	23	6
LP 500/1N D8 PLUS	-	-	500	400	320	250	8	9.6	80 B 2	1	23	6
LP 1000/1NF D8 PLUS	-	-	1000	800	630	-	8/2	9.6/2.4	100 B 8/2	1	51	10
LP 1000/1NL D8 PLUS	-	-	1000	800	630	-	4	4.8	90 B 4	1	47	10
LP 1000/1N D8 PLUS	-	-	1000	800	630	-	8	9.6	100 B 2	1	51	10
LP 1600/1NF D8 PLUS	-	-	1600	-	-	-	8/2	9.6/2.4	100 C 8/2	1	79	16
LP 1600/1NL D8 PLUS	-	-	1600	1250	1000	-	4	4.8	100 AL 4	1	75	16
LP 2500/1NF D8 PLUS	-	-	2500	2000	-	-	8/2	9.6/2.4	100 C 8/2	1	79	16
LP 2500/1NL D8 PLUS	-	-	2500	2000	-	-	4	4.8	100 AL 4	1	74	16
Chain safety	10:1	12.5:1	16:1	20:1	25:1	32:1						
LPM 250/1SL D8 PLUS	-	-	125	100	80	-	8	9.6	71 A 4	1	13	6
LP 500/1S D8 PLUS *	-	-	250	200	160	125	16	19.2	80 B 2	1	23	6
LP 500/1KL D8 PLUS *	-	-	250	200	160	125	16	19.2	80 A 4	1	23	6
LP 1000/1S D8 PLUS *	-	-	500	400	-	-	16	19.2	100 B 2	1	51	10
LP 1000/1KL D8 PLUS *	-	-	500	400	-	-	16	19.2	90 B 4	1	45	10
LP 1600/1SL D8 PLUS	1250	1000	800	-	-	-	8	9.6	100 AL 4	1	75	16

* must be operated with a frequency inverter

Table 5-3 Technical data LP C1 (three-phase version)

EN (ISO) classification	A3 (M3) 15 C/d (25% ED)	A4 (M4) 30 C/d (30% ED)	A5 (M5) 60 C/d (40% ED)	A5 (M5) 60 C/d (40% ED)	A5 (M5) 60 C/d (40% ED)	A5 (M5) 60 C/d (40% ED)	Lifting speed 50 Hz	Lifting speed 60 Hz	Motor type	Number of falls	Dead weight	Main fuse (400 V, slow-blow)
Series	Load capacity [kg]						[m/min]	[m/min]			[kg]	[A]
Chain safety	5:1	6.4:1	8:1	10:1	12.5:1	16:1						
LP 500/1NF C1	-	-	-	400	320	250	8/2	9.6/2.4	80 B 8/2	1	24	6
LP 500/1NL C1	-	-	-	400	320	250	4	4.8	80 A 4	1	24	6
LP 500/1N C1	-	-	-	400	320	250	8	9.6	80 B 2	1	24	6
LP 1000/1NF C1	-	-	-	800	630	-	8/2	9.6/2.4	100 B 8/2	1	53	10
LP 1000/1NL C1	-	-	-	800	630	-	4	4.8	90 B 4	1	49	10
LP 1000/1N C1	-	-	-	800	630	-	8	9.6	100 B 2	1	53	10
LP 1600/1NF C1	-	-	-	1250	1000	-	8/2	9.6/2.4	100 C 8/2	1	85	16
LP 1600/1NL C1	-	-	-	1250	1000	-	4	4.8	100 AL 4	1	80	16
LP 2500/1NF C1	-	-	-	2000	-	-	8/2	9.6/2.4	100 C 8/2	1	84	16
LP 2500/1NL C1	-	-	-	2000	-	-	4	4.8	100 AL 4	1	79	16
Chain safety	10:1	12.5:1	16:1	20:1	25:1	32:1						
LP 500/1S C1 *	-	-	250	200	160	125	16	19.2	80 B 2	1	24	6
LP 500/1KL C1 *	-	-	250	200	160	125	16	19.2	80 A 4	1	24	6
LP 1000/1S C1 *	-	-	500	400	-	-	16	19.2	100 B 2	1	53	10
LP 1000/1KL C1 *	-	-	500	400	-	-	16	19.2	90 B 4	1	47	10
LP 1600/1SL C1	1250	1000	800	-	-	-	8	9.6	100 AL 4	1	80	16

* must be operated with a frequency inverter

Table 5-4 Technical data LP D8 (single-phase version)

EN (ISO) classification	A3 (M3) 15 C/d (25% ED)	A4 (M4) 30 C/d (30% ED)	A5 (M5) 60 C/d (40% ED)	A5 (M5) 60 C/d (40% ED)	A5 (M5) 60 C/d (40% ED)	A5 (M5) 60 C/d (40% ED)	Lifting speed 50 Hz	Lifting speed 60 Hz	Motor type	Number of falls	Dead weight	Main fuse (230 V, slow-blow)
Series	Load capacity [kg]						[m/min]	[m/min]			[kg]	[A]
Chain safety	5:1	6.4:1	8:1	10:1	12.5:1	16:1						
LPM 250/1NL D8 1Ph	-	-	250	200	160	100	4	4.8	71 A 4	1	14	10
LP 500/1NL D8 1Ph	-	-	500	400	320	250	4	4.8	80 A 4	1	22	10
LP 1000/1NL D8 1Ph	-	-	1000	800	630	-	4	4.8	90 B 4	1	46	16
Chain safety	10:1	12.5:1	16:1	20:1	25:1	32:1						
LPM 250/1N D8 1Ph	-	-	125	100	80	-	8	9.6	71 A 4	1	14	10
LP 500/1N D8 1Ph	-	-	250	200	160	125	8	9.6	80 A 4	1	22	10
LP 1000/1N D8 1Ph	-	-	500	400	-	-	8	9.6	90 B 4	1	46	16

Table 5-5 Technical data LP D8 PLUS (single-phase version)

EN (ISO) classification	A3 (M3) 15 C/d (25% ED)	A4 (M4) 30 C/d (30% ED)	A5 (M5) 60 C/d (40% ED)	A5 (M5) 60 C/d (40% ED)	A5 (M5) 60 C/d (40% ED)	A5 (M5) 60 C/d (40% ED)	Lifting speed 50 Hz	Lifting speed 60 Hz	Motor type	Number of falls	Dead weight	Main fuse (230 V, slow-blow)
Series	Load capacity [kg]						[m/min]	[m/min]			[kg]	[A]
Chain safety	5:1	6.4:1	8:1	10:1	12.5:1	16:1						
LPM 250/1NL D8 PLUS 1Ph	-	-	250	200	160	100	4	4.8	71 A 4	1	15	10
LP 500/1NL D8 PLUS 1Ph	-	-	500	400	320	250	4	4.8	80 A 4	1	23	10
LP 1000/1NL D8 PLUS 1Ph	-	-	1000	800	630	-	4	4.8	90 B 4	1	48	16
Chain safety	10:1	12.5:1	16:1	20:1	25:1	32:1						
LPM 250/1N D8 PLUS 1Ph	-	-	125	100	80	-	8	9.6	71 A 4	1	15	10
LP 500/1N D8 PLUS 1Ph	-	-	250	200	160	125	8	9.6	80 A 4	1	23	10
LP 1000/1N D8 PLUS 1Ph	-	-	500	400	-	-	8	9.6	90 B 4	1	48	16

5.2 Electrical parameters

Table 5-6 Electrical parameters LP (three-phase version)

Series	Motor type	No. of poles	P _N [kW]	n _N [1/min]	min. / max. currents and start-up current									
					3 x 400 V, 50 Hz					3 x 230 V, 50 Hz				
					I _{N 380} [A]	I _{N 415} [A]	I _{max.} [A]	I _A /I _{N 415}	cos phi _N	I _{N 220} [A]	I _{N 240} [A]	I _{max.} [A]	I _A /I _{N 240}	cos phi _N
LPM 250	71 A 4	4	0.25	1385	1.6	2.0	2.6	1.65	0.55	2.8	3.4	4.4	1.65	0.55
LPML 250	71 A 4	4	0.38	1385	1.8	2.2	2.8	1.65	0.55	3.0	3.6	4.4	1.65	0.55
LP 500	80 B 8/2	8	0.18	665	1.4	1.9	2.2	1.45	0.51	2.4	3.1	3.5	1.45	0.51
		2	0.72	2745	2.4	3.4	3.7	2.75	0.77	3.2	4.3	4.7	2.75	0.77
LP 500	80 A 4	4	0.55	1420	1.3	1.9	2.2	1.65	0.68	2.6	3.2	4.1	1.65	0.68
LP 500	80 B 2	2	0.72	2745	3.2	3.4	3.7	2.75	0.77	5.6	5.9	6.2	2.75	0.77
LPL 500	80 A 4	4	0.76	1420	2.1	2.4	3.0	1.65	0.68	3.8	3.8	4.8	1.65	0.68
LP 1000	100 B 8/2	8	0.57	675	3.8	4.3	5.1	1.45	0.58	7.1	7.4	9.0	1.45	0.58
		2	2.3	2790	5.3	6.2	7.8	2.75	0.77	8.2	9.3	10.7	2.75	0.77
LP 1000	90 B 4	4	1.5	1430	3.4	3.8	4.2	1.65	0.76	6.1	6.5	7.4	1.65	0.76
LP 1000	100 B 2	2	2.3	2790	6.2	7.3	8.6	2.75	0.77	10.4	13.2	15.8	2.75	0.77
LPL 1000	90 B 4	4	1.5	1430	4.2	4.6	5.0	1.65	0.76	6.9	7.3	8.2	1.65	0.76
LP 1600/2500	100 C 8/2	8	0.93	685	4.8	6.0	6.5	2.35	0.53	8.2	9.7	11.0	2.35	0.55
		2	3.7	2820	9.8	9.7	10.5	4.95	0.82	15.8	15.2	16.5	4.95	0.82
LP 1600/2500	100 AL 4	4	2.2	1415	5.3	5.7	6.1	1.65	0.80	7.6	7.8	10.5	1.65	0.80
LP 1600/2500	100 C 2	2	3.7	2820	10.4	10.8	11.7	4.95	0.82	17.8	18.5	19.8	4.95	0.82

Table 5-7 Electrical parameters LP (three-phase version)

Series	Motor type	No. of poles	P _N [kW]	n _N [1/min]	min. / max. currents and start-up current									
					3 x 460 V, 60 Hz									
					I _{N 460} [A]	I _{N 480} [A]	I _{max.} [A]	I _A /I _{N 480}	cos phi _N					
LPM 250	71 A 4	4	0.30	1685	1.6	1.8	2.2	1.65	0.54					
LPML 250	71 A 4	4	0.46	1685	1.8	2.0	2.4	1.65	0.54					
LP 500	80 B 8/2	8	0.22	815	1.2	1.5	1.9	1.45	0.50					
		2	0.86	3345	2.3	2.8	3.2	2.75	0.76					
LP 500	80 A 4	4	0.66	1720	1.4	1.5	2.0	1.65	0.67					
LP 500	80 B 2	2	0.86	3345	3.2	3.4	3.7	2.75	0.76					
LPL 500	80 A 4	4	0.91	1720	2.1	2.4	2.5	1.65	0.76					
LP 1000	100 B 8/2	8	0.68	825	3.8	4.1	4.7	1.45	0.57					
		2	2.8	3390	5.3	5.8	7.3	2.75	0.76					
LP 1000	90 B 4	4	1.8	1730	3.4	3.8	4.2	1.65	0.75					
LP 1000	100 B 2	2	2.8	3390	6.2	6.5	8.1	2.75	0.76					
LPL 1000	90 B 4	4	1.8	1730	4.2	4.6	5.0	1.65	0.75					
LP 1600/2500	100 C 8/2	8	1.15	835	5.1	5.3	5.9	2.35	0.54					
		2	4.5	3420	9.4	9.6	10.2	4.95	0.81					
LP 1600/2500	100 AL 4	4	2.7	1715	5.3	5.7	6.1	1.65	0.79					
LP 1600/2500	100 C 2	2	4.5	3420	10.4	10.8	11.7	4.95	0.81					

Table 5-8 Electrical parameters LP (three-phase version)

Series	Motor type	No. of poles	P _N [kW]	n _N [1/min]	min. / max. currents and start-up current									
					3 x 208-230/460 V, 60 Hz									
					I _{N 208} [A]	I _{N 460} [A]	I _{max.} [A]	I _A /I _{N 460}	cos phi _N					
LPM 250	71 A 4	4	0.30	1685	2.3	1.2	2.6	1.65	0.54					
LPML 250	71 A 4	4	0.46	1685	2.9	1.4	3.2	1.65	0.54					
LP 500	80 A 4	4	0.66	1720	4.0	2.3	4.7	1.65	0.67					
LP 500	80 B 2	2	0.86	3345	6.4	3.5	6.9	1.65	0.76					
LPL 500	80 A 4	4	0.91	1720	5.0	2.6	5.3	1.65	0.67					
LP 1000	90 B 4	4	1.8	1730	4.8	2.5	5.6	1.65	0.75					
LPL 1000	90 B 4	4	1.8	1730	5.6	3.3	6.4	1.65	0.75					

Table 5-9 Electrical parameters LP (single-phase version)

Series	Motor type	No. of poles	P _N [kW]	n _N [1/min]	min. / max. currents and start-up current									
					1 x 115 V, 50 Hz					1 x 230 V, 50 Hz				
					I _{N 115} [A]		I _{max.} [A]	I _A /I _{N 115}	cos phi _N	I _{N 230} [A]		I _{max.} [A]	I _A /I _{N 230}	cos phi _N
LPM 250	71 A 4	4	0.25	1385	5.7		5.9	1.65	0.55	3.0		3.2	1.95	0.55
LP 500	80 A 4	4	0.55	1420	10.3		11.4	1.95	0.68	5.1		5.9	2.45	0.68
LP 1000	90 B 4	4	1.5	1420	13.0		17.0	1.95	0.76	6.0		7.5	2.45	0.76

Table 5-10 Electrical parameters LP (single-phase version)

Series	Motor type	No. of poles	P _N [kW]	n _N [1/min]	min. / max. currents and start-up current									
					1 x 115 V, 60 Hz					1 x 230 V, 60 Hz				
					I _{N 115} [A]		I _{max.} [A]	I _A /I _{N 115}	cos phi _N	I _{N 230} [A]		I _{max.} [A]	I _A /I _{N 230}	cos phi _N
LPM 250	71 A 4	4	0.30	1685	9.2		9.5	1.65	0.54	3.4		3.7	1.95	0.54
LP 500	80 A 4	4	0.66	1720	13.2		15.1	1.95	0.67	6.6		7.6	2.45	0.67
LP 1000	90 B 4	4	1.8	1720	14.7		15.0	1.95	0.75	6.9		7.0	2.45	0.75

5.3 EC Declaration of conformity

Declaration for a machinery in accordance with the EU directives 2006/42/EC, Annex II A, 2014/30/EU, Annex I and 2014/35/EU, Annex III



We,

GIS AG, Swiss Lifting Solutions, Luzernerstrasse 50, CH-6247 Schötz

hereby declare that the machinery

GIS electric chain hoist, series	LP
with a load capacity of	100 kg to 6300 kg
serial number range	1000001 to 2000000

developed for lifting and lowering loads, meets the essential requirements of the following EC directives, insofar as applicable to the scope of the delivery, in standard production form including load control, from the 2016 model year:

EC Machinery Directive	2006/42/EC
EC Directive on Electromagnetic Compatibility	2014/30/EU
EC Low Voltage Directive	2014/35/EU

Harmonised standards applied:

EN 818-7	Chains for lifting purposes; Part 7: Grade T
EN ISO 13849-1	Safety-related parts of control systems; Part 1: General principles for design
EN 14492-2	Cranes, power driven winches and hoists; Part 2: Power driven hoists
EN 60204-32	Electrical equipment of machines; Part 32: Requirements for hoisting machines

Standards and technical specifications applied:

EN 17206 *	Entertainment technology - Machinery for stages and other production areas - Safety requirements and inspections
FEM 9.751	Power driven lifting device series; safety
FEM 9.755	Measures for achieving safe operating periods
DIN 56950	Event technology
IGVV SQ P2	Standards for event technology

* The factory setting of the slipping clutch takes place in accordance with the superordinate requirements of the harmonised hoist standard EN 14492-2, published in the official journal of the European Union, to fulfill the requirements of the European Machinery Directive. Readjustments in accordance with the requirements of EN 17206 (> 200% characteristic load), outside the specified parameters of EN 14492-2, are permitted to be performed by educated people, if a suitable indirectly acting nominal load limiter is in operation.

Authorised to compile relevant technical documentation:
GIS AG, Luzernerstrasse 50, CH-6247 Schötz

Schötz, 01.03.2021

GIS AG

I. Muri
Director

E. Widmer
Sales Manager

The completion, installation and start-up as per instruction manual is documented in the inspection pass.

5.4 EC Declaration of incorporation

Declaration for the incorporation of a partly completed machinery in accordance with the EU directives 2006/42/EC, Annex II B, 2014/30/EU, Annex I and 2014/35/EU, Annex III



We,

GIS AG, Swiss Lifting Solutions, Luzernerstrasse 50, CH-6247 Schötz

hereby declare that the partly completed machine

GIS electric chain hoist, series	LP
with a load capacity of	100 kg to 6300 kg
serial number range	1000001 to 2000000

developed for lifting and lowering loads and intended to be integrated in a machine, meets the essential requirements of the following EC directives, insofar as applicable to the scope of the delivery, in standard production form including load control, from the 2016 model year:

EC Machinery Directive	2006/42/EC
EC Directive on Electromagnetic Compatibility	2014/30/EU
EC Low Voltage Directive	2014/35/EU

We also declare that the technical documentation has been compiled in accordance with Annex VII, Part B of Directive 2006/42/EC. We undertake to submit the specific documents relating to the lifting device to national authorities on receipt of a reasonable request. The information will be supplied by electronic means.

Harmonised standards applied:

EN 818-7	Chains for lifting purposes; Part 7: Grade T
EN ISO 13849-1	Safety-related parts of control systems; Part 1: General principles for design
EN 14492-2	Cranes, power driven winches and hoists; Part 2: Power driven hoists
EN 60204-32	Electrical equipment of machines; Part 32: Requirements for hoisting machines

Standards and technical specifications applied:

EN 17206 *	Entertainment technology - Machinery for stages and other production areas - Safety requirements and inspections
FEM 9.751	Power driven lifting device series; safety
FEM 9.755	Measures for achieving safe operating periods
DIN 56950	Event technology
IGVW SQ P2	Standards for event technology

* The factory setting of the slipping clutch takes place in accordance with the superordinate requirements of the harmonised hoist standard EN 14492-2, published in the official journal of the European Union, to fulfill the requirements of the European Machinery Directive. Readjustments in accordance with the requirements of EN 17206 (> 200% characteristic load), outside the specified parameters of EN 14492-2, are permitted to be performed by educated people, if a suitable indirectly acting nominal load limiter is in operation.

This declaration refers only to the lifting device. Start-up is prohibited until it has been proven that the entire system into which the lifting device is integrated corresponds with the above EC Directives.

Authorised to compile relevant technical documentation:
GIS AG, Luzernerstrasse 50, CH-6247 Schötz

Schötz, 01.03.2021

GIS AG



I. Muri
Director



E. Widmer
Sales Manager

The completion, installation and start-up as per instruction manual is documented in the inspection pass.

