





AC-DC Din Rail Mountable Power Supply SINGLE PHASE INPUT

Features

- Universal Input 90~264Vac
- 100% Full Load Burn-in Test
- · Cooling by Free Air Convection
- All Round Protections: Short Circuit, Over Voltage, Over Current, Over Temperature
- LED Indicator for DC Power On
- . LED Indicator for DC Low

Applications

√ Process Control

- \checkmark Traffic & Transportation System
- √ Factory Automation
- √ Other Industrial Applications



Electrical

Part Number	Nominal Input Voltage	Output Voltage	Output Current	Ripple (Max.)	Efficiency (Typ.)	Certificate
RND 315-00009	100-240VAC	12V	8A	100mV	82%	CE, UL
RND 315-00010	100-240VAC	24V	5A	120mV	85%	CE, UL
RND 315-00015	160-240VAC	48V	2.5A	240mV	86%	CE, UL

NOTE:

 
- 1. The ripple values are measured at 20MHz of bandwidth by using a 12" twisted pair-wire terminated with 0.1uF & 47uF parallel capacitor under ambient temperature 25°C at rated input voltage and rated load:
- 2. The efficiency values are measured under ambient temperature 25°C at rated input voltage and rated load.

INPUT

PARAMETER	CONDITIONS	MIN	TYP	MAX	UNITS	
Input voltage		90		264	Vac	
Input frequency		47		63	Hz	
Input current	Full load, Vin=115Vac Full load, Vin=230Vac			2.6 1.3	A A	
	Cold start, Vin=115Vac Cold start, Vin=230Vac			30 60	A A	
Inrush current	This product is built in inrush limiting circuit to protect the circuit from surge current damages when the power is turned on. Malfunction can occur by repeating the input voltage on and off rapidly. Therefore, sufficient interval should be given between turning on and off the power; To avoid connecting the switch or fuse to input terminal (outside of the power supply), more consideration should be given when selecting the parts that can endure the inrush current					
Stand-by power consumption	Vin=230Vac			4	w	
Surge voltage	L-N			2	KV	
	1					











CONDITIONS	MIN	TYP	MAX	UNITS	
			2	%	
RND 315-00009 RND 315-00010 RND 315-00015		11-14 23-28 47-55		V V V	
Output voltage can be adjusted within above range by V-ADJ. variable resistance inside of the power supply. When output voltage exceeds the range, the power supply will be in failure or get into over voltage protection mode. To avoid the case that the output voltage is higher than rated voltage, output current should be used under rated current					
	0			А	
Vin from 100Vac to 240Vac			2	%	
Vout from min. to max.			3	%	
Full load, Vin=115Vac		560		ms	
Full load, Vin=115Vac		20		ms	
	RND 315-00009 RND 315-00010 RND 315-00015 Output voltage can be adjusted within resistance inside of the power supply. the range, the power supply will be in protection mode. To avoid the case the than rated voltage, output current shows that the contraction of the contraction	RND 315-00009 RND 315-00010 RND 315-00015 Output voltage can be adjusted within above resistance inside of the power supply. When o the range, the power supply will be in failure protection mode. To avoid the case that the o than rated voltage, output current should be to the following of the case that the original origin	RND 315-00009 11-14 RND 315-00010 23-28 RND 315-00015 47-55 Output voltage can be adjusted within above range by resistance inside of the power supply. When output vol the range, the power supply will be in failure or get in protection mode. To avoid the case that the output vol than rated voltage, output current should be used und O Vin from 100Vac to 240Vac Vout from min. to max. Full load, Vin=115Vac 560	RND 315-00009 RND 315-00010 RND 315-00015 Output voltage can be adjusted within above range by V-ADJ. vesistance inside of the power supply. When output voltage exthe range, the power supply will be in failure or get into over vprotection mode. To avoid the case that the output voltage is than rated voltage, output current should be used under rated O Vin from 100Vac to 240Vac 2 Vout from min. to max. 3 Full load, Vin=115Vac 560	

Protection

Shut off output voltage, the power supply will recover after the power is turned on again
RND 315-00009: over voltage protection value 20V RND 315-00010: over voltage protection value 33V RND 315-00015: over voltage protection value 66V
(1) When output voltage exceeds above over voltage protection value or reversal voltage occurs, the protection will be started and the output voltage will be cut off in order to protect the power supply; (2) The power supply will recover after the power is turned on again
RND 315-00009: over current protection value 10A RND 315-00010: over current protection value 6.6A RND 315-00015: over voltage protection value 3.3A
(1) When output voltage exceeds above over current protection value, the protection will be started and the output voltage will be cut off in order to protect the power supply; (2) The power supply will recover automatically after the fault condition is removed
Over temperature protection value: 100±10°C
(1) When the ambient temperature exceeds above over temperature protection value, the protection will be started and the output voltage will be cut off in order to protect the power supply; (2) The power supply will recover after the power is turned on again







.....

Environment


PARAMETER	CONDITIONS	MIN	TYP	MAX	UNITS
Ambient operating temperature	Startup at rated voltage	-25		+70	°C
Operating relative humidity	Non condensing	20		95	%
Storage temperature	Humidity 5 ~ 95% RH	-40		+85	°C
MTBF	Full load, 220Vac input, 25℃ ambient temperature	200			Khrs
DC-OK led	LED(Green) DC OK LED light will be ON when the power supply is properly operated				
DC-Low led	LED(Red) DC Low LED light will be ON: (1) when output voltage is below 85%(±2.5%) from the rated output voltage; (2) when get over voltage, over current, over temperature and short circuit fault				
Cooling Free air convection					
Mounting method	chod Vertical				
Dimension(W x H x D)	40.0 x 130.0 x 125.0mm (1.57 x 5.12 x 4.92inch)				
Weight	800g				
acking 15pcs/13.5kg/0.7cuft/carton Carton size 620 x 260 x 175mm(LxWxH)					


Safety/EMC


Isolation voltage	I/P-O/P: 3KVac, I/P-FG: 1.5KVac, O/P-FG: 1.5KVac
Insulation resistance	100MΩ Max./500VDC
Safety	Design refer to UL60950-1, EN60950-1
EMC	EN 55022:2010+AC:2011 (CISPR 22:2008) ClassB EN 61000-3-2:2014 (IEC 61000-3-2:2014) EN 61000-3-3:2013 (IEC 61000-3-3:2013) EN 55024:2010 (CISPR 24:2010)

NOTE: Unless otherwise specified, all the above parameters are measured at ambient temperature of 25°C and Vin=100Vac to 240Vac.

<u>Mechanical</u>

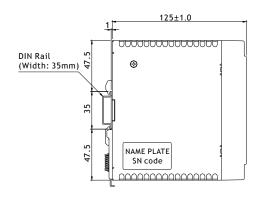

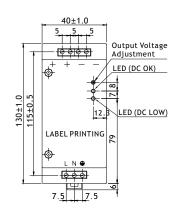

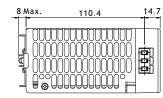

Unit: mm Tolerance: ±1.0





Marking	No.	Assignment	
+	1	DC(+) Output Terminal	
+	2	DC(+) Output Terminal	
-	3	DC() Output Tarminal	
_	4	DC(-) Output Terminal	
L	5	AC(L) Input Terminal	
N	6	AC(N) Input Terminal	
\(\begin{array}{c} \\ \end{array} \end{array} \end{array}	7	AC Grounding Terminal	
V-ADJ.	/	DC Output voltage adjustment trimmer	
DC OK	/	DC Output OK indication LED(Green)	
DC LOW	/	DC Output Low indication LED(Red)	

(




Electrical Curve

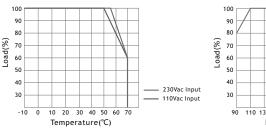

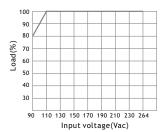


Block Diagram

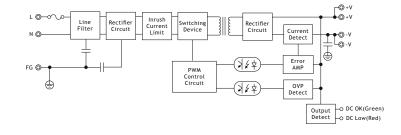

Application Note

1. Series Operation

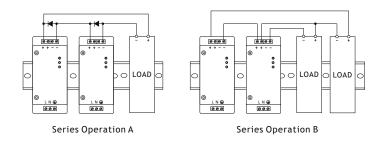

- Series operation can be connected as shown in above;
 Load current should be less than the current value of the product with the lowest output current specified at the product specification with the power supply at series connection.









Application Note


2. Parallel Operation

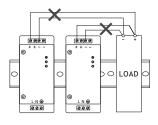

Parallel Operation A (Unable to use)

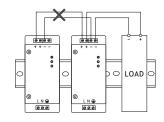

Parallel Operation B (Unable to use)

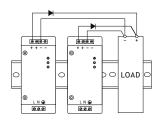

Parallel Operation C (Backup)

Note:


- 1. Parallel operation should be composed with the same products, while the connection should be as shown as "Parallel operation C";
- 2. In parallel operation C, current capacity cannot be increased, while it should be used for backup only. Moreover, diode that is to be added during parallel operation should be selected after considering it's voltage drop, output voltage and current capacity.

Application Note

3. Mounting Method


(1) How to fix

Firstly hang A part on the top of Rail as shown in below, then push the power supply into B direction to fix it.

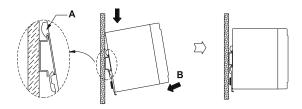

(2) How to remove

Remove the power supply to D direction, pulling C part by using tools, such as a screwdriver, to downward direction.

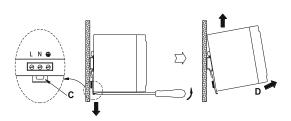










Application Note

3. Mounting Method

(3) Mounting Spacing

Mounting method should be considered with airflow. Leave enough space between the units when several units are mounted together. Forced air cooling makes protection against heat better.

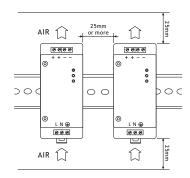



4. Cautions

- (1) Please confirm if the capacity of the product is suitable for your intended application before putting it in use;
- (2) Only the rated input voltage specified on the product should be used;
- (3) Only the wires with rated capacity should be connected to this product, as allowable voltage and current is varied according to each type of wire;
- (4) Ground terminal of the power supply must be grounded before use to prevent electric shock or electromaganetic interference;
- (5) Be cautions to keep the product clean as foreign matter near the input & output terminal or inside if the product could cause series damages;
- (6) If a fuse installed in the product blows off, the product should experience damages not only to the fuse but also to other parts as well. Therefore, the product is to be required for maintenance work from customer service department as well as replacement of the fuse;
- (7) Due to constant leakage current flows within the product, extra caution should be made if multiple number of products are used connecting to each other as total leakage current could be amounted beyond the capacity;
- (8) Be sure to avoid any physical contact with the product since some of the parts inside of the product are being functioned at high voltage, which could cause serious electric shock;
- (9) For the purpose of safety as well as reliability of the product, please avoid using the product at the following sites:
- A place near water or fire
- A place with high room temperature and poor ventilation
- A place with a presence of foreign subject or dust
- A place near volatile or flammable compounds
- A place with high humidity
- A place vulnerable for vibration or shock
- (10) Do not inspect or repair the product while the power is applied;
- (11) Unauthorized modification should be avoided in order to prevent series injury or physical loss due to any malfunction;
- (12) In case of power outage while in operation, be sure to turn off the power supply.

5. Warranty

- (1) Repair service will be provided for free upon any mechanical, technical or functional defects during the guaranteed warranty, however, any defects or malfunction due to international infliction or negligence by customers will be repaired at the customer's expense;
- (2) Guaranteed warranty of the product runs for 3 years, while appearance and specification of the product is subject for change without any prior notification for the purpose of quality improvement of the product.







