

# LED GLOBE




## ENGLISH Operation Manual

Other languages can be downloaded from:  
[WWW.JB-SYSTEMS.EU](http://WWW.JB-SYSTEMS.EU)



*Version: 1.0*

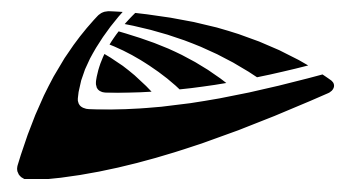

**JB SYSTEMS**



### **EN - DISPOSAL OF THE DEVICE**

Dispose of the unit and used batteries in an environment friendly manner according to your country regulations.

### **FR - DÉCLASSER L'APPAREIL**

Débarrassez-vous de l'appareil et des piles usagées de manière écologique Conformément aux dispositions légales de votre pays.

### **NL - VERWIJDEREN VAN HET APPARAAT**

Verwijder het toestel en de gebruikte batterijen op een milieuvriendelijke manier conform de in uw land geldende voorschriften.

### **DU - ENTSORGUNG DES GERÄTS**

Entsorgen Sie das Gerät und die Batterien auf umweltfreundliche Art und Weise gemäß den Vorschriften Ihres Landes.

### **ES - DESHACERSE DEL APARATO**

Reciclar el aparato y pilas usadas de forma ecologica conforme a las disposiciones legales de su país.

### **PT - COMO DESFAZER-SE DA UNIDADE**

Tente reciclar a unidade e as pilhas usadas respeitando o ambiente e em conformidade com as normas vigentes no seu país.

# OPERATION MANUAL

Thank you for buying this JB Systems® product. To take full advantage of all possibilities and for your own safety, please read these operating instructions very carefully before you start using this unit.

This unit is radio-interference suppressed. This product meets the requirements of the current European and national guidelines. Conformity has been established and the relevant statements and documents have been deposited by the manufacturer.

This device was designed to produce decorative effect lighting and is used in light show systems.

## FEATURES

- The perfect alternative for the classic mirror ball with pin spots!
- This LED GLOBE offers the same type of effect with much more possibilities!
- Take control over rotation speed, colors, strobe, etc. or just use the build-in programs.
- Simple and fast installation, easy to use
- Multiple working modes:
  - DMX-controlled via 1, 3, 9 or 19 channels.
  - Standalone: sound activated (internal microphone) or automatic.
  - Standalone, controlled via the IR remote controller (included)
- Great built-in programs for wonderful, ever changing, light shows.
- Several units can be connected in master/slave to create wonderful synchronized shows.
- 3-digit LED display for easy menu navigation.
- USB-connector for wireless DMX control by an optional Briteq® WTR-DMX dongle.
- IEC power in/out can be used to easily link several units.

## BEFORE USE

- Before you start using this unit, please check if there's no transportation damage. Should there be any, do not use the device and consult your dealer first.
- **Important:** This device left our factory in perfect condition and well packaged. It is absolutely necessary for the user to strictly follow the safety instructions and warnings in this user manual. Any damage caused by mishandling is not subject to warranty. The dealer will not accept responsibility for any resulting defects or problems caused by disregarding this user manual.
- Keep this booklet in a safe place for future consultation. If you sell the fixture, be sure to add this user manual.

### Check the contents:

Check if the cardboard box contains the following items:

- LED GLOBE
- IR Remote controller
- Mains cable
- Hanging bracket + 4 screws
- Operating instructions

## SAFETY INSTRUCTIONS:



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**CAUTION:** To reduce the risk of electric shock, do not remove the top cover. No user-serviceable parts inside. Refer servicing to qualified service personnel only.



The lightning flash with arrowhead symbol within the equilateral triangle is intended to alert the user or the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying this appliance.



This symbol means: indoor use only.



This symbol means: Read instructions.



This symbol determines: the minimum distance from lighted objects. The minimum distance between light-output and the illuminated surface must be more than 1 meter.

**RISK GROUP 2**


**CAUTION:**  
Do not stare at operating lamp

**CAUTION:** Do not stare at operating lamp.  
May be harmful to the eyes.

- To protect the environment, please try to recycle the packing material as much as possible.
- A new light effect sometimes causes some unwanted smoke and/or smell. This is normal and disappears after some minutes.
- To prevent fire or shock hazard, do not expose this appliance to rain or moisture.
- To avoid condensation to be formed inside, allow the unit to adapt to the surrounding temperatures when bringing it into a warm room after transport. Condense sometimes prevents the unit from working at full performance or may even cause damages.
- This unit is for indoor use only.
- Don't place metal objects or spill liquid inside the unit. Electric shock or malfunction may result. If a foreign object enters the unit, immediately disconnect the mains power.
- Locate the fixture in a well ventilated spot, away from any flammable materials and/or liquids. The fixture must be fixed at least 50cm from surrounding walls.
- Don't cover any ventilation openings as this may result in overheating.
- Prevent use in dusty environments and clean the unit regularly.
- Keep the unit away from children.
- Inexperienced persons should not operate this device.
- The save ambient temperature is between 15° & 40°C. Don't use this unit at higher ambient temperatures.
- Make sure the area below the installation place is free from unwanted persons during rigging, de-rigging and servicing.
- Always unplug the unit when it is not used for a longer time or before replacing the bulb or start servicing.
- The electrical installation should be carried out by qualified personal only, according to the regulations for electrical and mechanical safety in your country.
- Check that the available voltage is not higher than the one stated on the rear panel of the unit.
- The power cord should always be in perfect condition. Switch the unit immediately off when the power cord is squashed or damaged. It must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never let the power-cord come into contact with other cables!
- This fixture must be earthed to in order comply with safety regulations.
- Don't connect the unit to any dimmer pack.
- Always use an appropriate and certified safety cable when installing the unit.
- In order to prevent electric shock, do not open the cover. Apart from the lamp and mains fuse there are no user serviceable parts inside.
- **Never** repair a fuse or bypass the fuse holder. **Always** replace a damaged fuse with a fuse of the same type and electrical specifications!
- In the event of serious operating problems, stop using the fixture and contact your dealer immediately.
- The housing and the lenses must be replaced if they are visibly damaged.
- Please use the original packing when the device is to be transported.
- Due to safety reasons it is prohibited to make unauthorized modifications to the unit.

**Important:** Never look directly into the light source! Don't use the effect in the presence of persons suffering from epilepsy.

## DESCRIPTION:

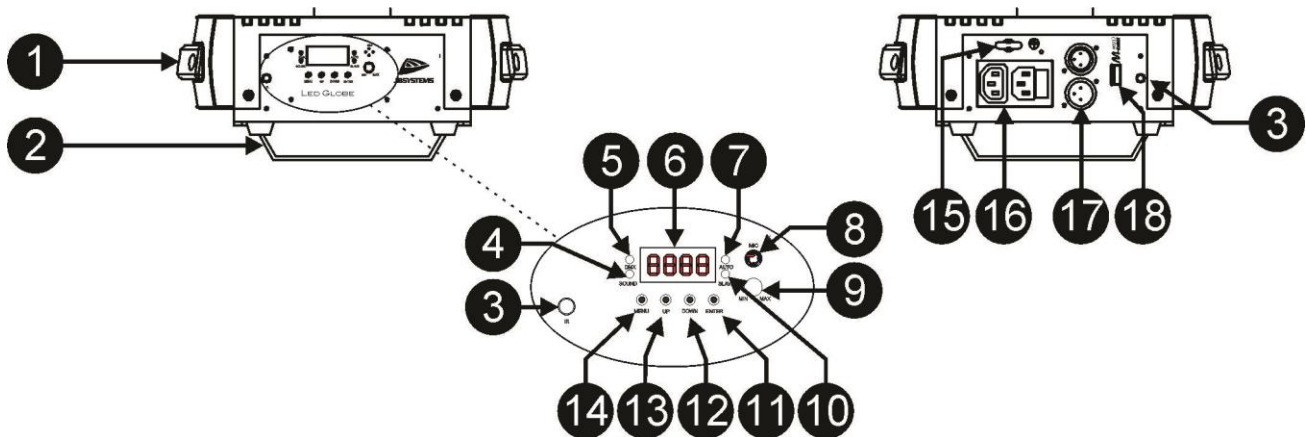

1. **HANDLE** to carry the unit
2. **HANGING BRACKET:** with a mounting hole in the middle to fix a mounting hook
3. **IR RECEIVER:** point your IR Remote to this area if you want to control the unit
4. **[SOUND] LED:** flashes when sound is detected. Use the sensitivity knob (9) to set the desired level
5. **[DMX] LED:** this LED is on when a dmx signal is detected
6. **DISPLAY:** shows all the necessary information about settings and working modes.
7. **[AUTO] LED:** this LED is on when the unit is in automatic mode
8. **INTERNAL MICROPHONE:** is used to synchronize the sound controlled shows to the beat of the music. You can set the sensitivity of this microphone by adjusting the sensitivity knob (9)
9. **SENSITIVITY KNOB:** turn this knob anti-clockwise to decrease the sensitivity or turn it clockwise to increase the sensitivity of the integrated microphone. Try to make the setting so the sound controlled programs react to the beat of the music and not to the surrounding noise.
10. **[SLAVE] LED:** this LED is on when the unit is in slave mode
11. **ENTER BUTTON:** used to confirm your choice
12. **DOWN BUTTON:** to go back in the menu and to lower the values shown on the display
13. **UP BUTTON:** to go up in the menu and to increase the values shown on the display
14. **MENU BUTTON:** used to browse the different menu options
15. **SAFETY EYE:** here you can attach the optional safety cable
16. **MAINS INPUT WITH FUSEHOLDER + MAINS LINK OUTPUT:**
  - Mains Input: Connect the supplied mains cable here.
  - Important: Always replace the fuse by a model with exactly the same specifications !
  - Mains output: use a special IEC male/female power cable (or a JB Systems Combi Cable) to connect this output with the mains input of the next LED GLOBE unit for easier linking
17. **DMX INPUT/OUTPUT:** 3pin male/female XLR-connectors used to connect universal DMX-cables. The input receives instructions from a DMX-controller (in DMX mode) or from the Master unit (in Master/Slave mode). The output is used to connect the unit with the next unit in the DMX chain.
18. **M-DMX INPUT:** Please note that this USB-connector is NOT used for updates or to connect the unit to a PC! Instead this USB-connector makes it very easy to add wireless DMX to the unit! Just add the (optional) WTR-DMX DONGLE from BRITEQ® and you will get wireless DMX! Moreover you will be able to connect other DMX-controlled equipment to the DMX-output so you can share the wireless DMX function with all connected units! No extra settings to be made in the setup menu, just follow the procedure in the user manual supplied with the WTR-DMX DONGLE from BRITEQ®. The separate WTR-DMX DONGLE is available from [WWW.BRITEQ-LIGHTING.COM](http://WWW.BRITEQ-LIGHTING.COM) (order code: 4645)

## OVERHEAD RIGGING

- **Important:** The installation must be carried out by qualified service personal only. Improper installation can result in serious injuries and/or damage to property. Overhead rigging requires extensive experience! Working load limits should be respected, certified installation materials should be used, the installed device should be inspected regularly for safety.
- Make sure the area below the installation place is free from unwanted persons during rigging, de-rigging and servicing.
- Locate the fixture in a well ventilated spot, far away from any flammable materials and/or liquids. The fixture must be fixed **at least 50cm** from surrounding walls.
- The device should be installed out of reach of people and outside areas where persons may walk by or be seated.
- Before rigging make sure that the installation area can hold a minimum point load of 10times the device's weight.
- Always use a certified safety cable that can hold 12 times the weight of the device when installing the unit. This secondary safety attachment should be installed in a way that no part of the installation can drop more than 20cm if the main attachment fails.
- The device should be well fixed; a free-swinging mounting is dangerous and may not be considered!
- Don't cover any ventilation openings as this may result in overheating.
- The operator has to make sure that the safety-relating and machine-technical installations are approved by an expert before using them for the first time. The installations should be inspected every year by a skilled person to be sure that safety is still optimal.

## HOW TO SET UP AND CONTROL THE UNIT

*You can operate the unit in several ways:*

### **1) FULL AUTOMATIC STANDALONE MODE:**

The effect automatically runs a preprogrammed sequence. Select this mode when only 1 LED GLOBE unit is used (standalone) or when the unit is placed as the first (master) unit in a chain with several LED GLOBE units in Master/Slave mode (see below).

There are different types of standalone modes:

**Automatic show mode:** this is how to select one of the preprogrammed shows

- Press the [MENU] button until the display shows [Aut].
- Press the [ENTER] button to enter the setup.
- Use the [UP] and [DOWN] buttons to select one of the 5 automatic shows (P1-P5)
- Press the [ENTER] button to confirm.
- Use the [UP] and [DOWN] buttons to select the speed of the program (S.1 to S.100)
- Press the [ENTER] button to confirm.

**Color mode:** this is how to set a fixed color

- Press the [MENU] button until the display shows [CoL].
- Press the [ENTER] button to enter the setup. The display shows [CoLo].
- Press the [ENTER] button to enter the setup. [r] appears on the display
- Use the [UP] and [DOWN] buttons to set the intensity of the red color
- Press the [ENTER] button. [r\*\*\*] (r followed by 3 numbers) appears on the display
- Use the [UP] and [DOWN] buttons to set the intensity of the red color
- Press the [ENTER] button. [G\*\*\*] (G followed by 3 numbers) appears on the display
- Use the [UP] and [DOWN] buttons to set the intensity of the green color
- Press the [ENTER] button. [b\*\*\*] (b followed by 3 numbers) appears on the display
- Use the [UP] and [DOWN] buttons to set the intensity of the blue color
- Press the [ENTER] button. [W\*\*\*] (W followed by 3 numbers) appears on the display
- Use the [UP] and [DOWN] buttons to set the intensity of the white color
- Press the [ENTER] button. [S\*\*\*] (S followed by numbers) appears on the display
- Use the [UP] and [DOWN] buttons to set the intensity strobe speed. 000= no strobe
- Press the [ENTER] button. [di-r] appears on the display

- Use the [UP] and [DOWN] buttons to select the direction of the rotation [di -L] = counter clockwise or [di -r] = clockwise
- Press the [ENTER] button to confirm.
- Use the [UP] and [DOWN] buttons to select the speed of motor:
  - [M 0] = No rotation.
  - [M 1] to [M 100] = rotation slow to fast

### **2) SOUND CONTROLLED STANDALONE MODE:**

The LED GLOBE runs a preprogrammed sequence to the rhythm of the music. Select this mode when only 1 LED GLOBE is used (standalone) or when the LED GLOBE is placed as the first (master) unit in a chain with several units.


- Press the [MENU] button until the display shows [Sou].
- Press the [ENTER] button to confirm your choice.
- Use the [UP] and [DOWN] buttons to select one of the 3 sound controlled shows (Snd1-Snd3)
- Press the [ENTER] button to confirm.

### **3) MASTER/SLAVE STANDALONE MODE:**

When you have several LED GLOBE units and you want them to all work synchronously, you can work in the so called master/slave mode. To do this, just daisy-chain all the units and make the settings of the desired automatic or sound controlled program in the first unit of the chain (see description above). This unit is called the Master unit. Now put all the other units in slave mode. Once this is done, the “slave” units will follow the orders of the Master unit, so they work in perfect synchronicity.

To set a unit in slave mode:

- Press the [MENU] button until the display shows [SLA].
- Press the [ENTER] button to enter this mode.
- [SLAV] will appear on the display
- Press the [ENTER] button to confirm the slave mode.

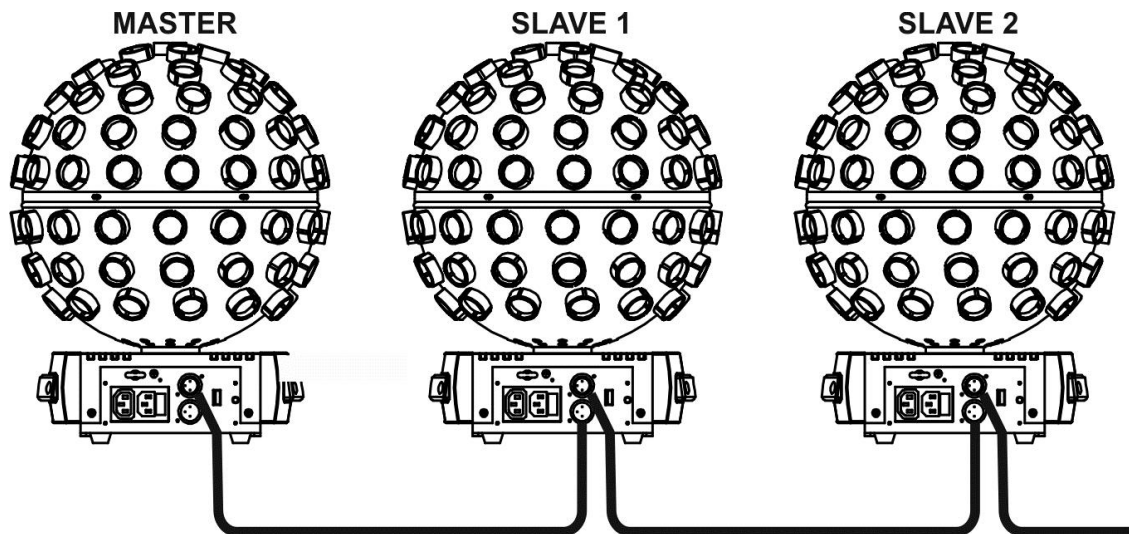

### **4) CONTROLLED VIA THE IR REMOTE:**

The standalone functions of the LED GLOBE can be controlled via the supplied IR remote controller.


**Important:** to be able to use the IR remote controller, the IR remote receiver has to be switched on in the unit.

This is how to do this:

- Press the [MENU] button until the display shows [SYS].
- Press the [ENTER] button to enter this part of the menu with extra options.
- Use the [UP/DOWN] buttons to browse the extra functions in this System menu
- When [ir] appears on the screen, press [ENTER]
- Use the [UP / DOWN] button to select the desired mode:
  - ON = IR remote receiver activated.
  - OFF = IR remote receiver deactivated.
- When the receiver is switched ON in the unit, you can use the IR remote control



Functions:

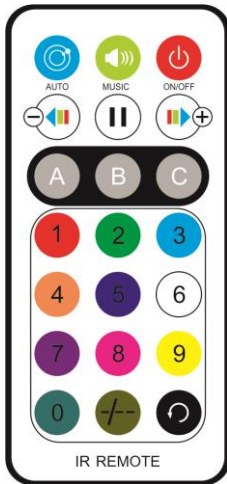


	To switch the effect On or Off
	To select the automatic programs P1-P5
	To select sound activated programs SOU1-SOU5
	Use these buttons to modify the program speed
	To pause the program
	To toggle between automatic and sound mode
	Select the speed for the automatic programs
	Static Color mode: press 1 (red), 2 (green), 3 (blue), 6 (white) or 0 (fade)
	When in color mode: use the numeric buttons to select the motor rotation speed
	When in color mode: press to invert rotation direction

**5) CONTROLLED VIA DMX:**

The LED GLOBE can be controlled by any standard DMX-controller in 4 different DMX-modes: 1, 3, 9 and 19 channels


- Connect the DMX input of the LED GLOBE to the DMX output of the previous unit in the chain or directly to the DMX-output of your controller.
- Press the [MENU] button until the display shows: "DMX".
- Press the [ENTER] button to enter this option
- The actual DMX address is shown on the display.
- Press the [ENTER] button again
- The channel mode is shown on the display
- Use the [UP/DOWN] buttons to select the desired DMX-mode. (1CH, 3CH, 9CH or 19CH). See the DMX charts below
- Press the [ENTER] button to confirm your choice.
- Now you can use the [UP/DOWN] buttons to set the DMX address. [dxxx]
- Press the [ENTER] button to confirm your choice.

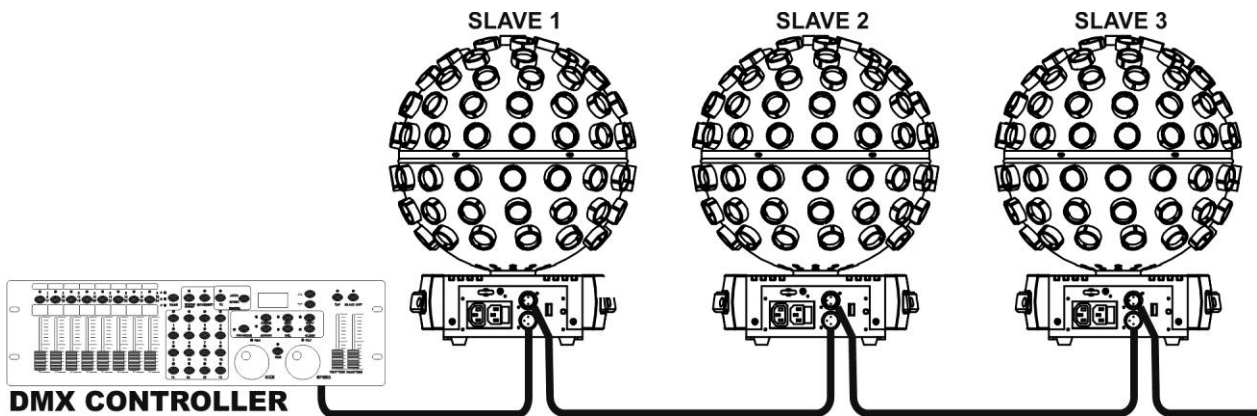

**Some more information on DMX512:**

The DMX-protocol is a widely used high speed signal to control intelligent light equipment. You need to "daisy chain" your DMX controller and all the connected light effects with a good quality XLR M/F balanced cable. To prevent strange behavior of the light effects, due to interferences, you must use a 90Ω to 120Ω terminator at the end of the chain. Never use Y-splitter cables, this simply won't work!

Each effect in the chain needs to have its proper starting address so it knows which commands from the controller it has to decode.

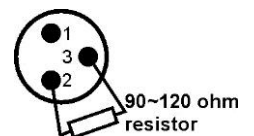



**1 CHANNEL DMX-CONFIGURATION:**

DMX Channel	DMX-value	function	remarks
1	000-005	Blackout	No Rotation
	006-036	White	Slow rotation
	037-068	Red	
	069-100	Green	
	101-132	Blue	
	118-164	Auto Program P5	
	165-196	Sound Program S3	No rotation
	197-228	Sound Program S3	Slow rotation
	229-255	Sound Program S3	Medium rotation

**3 CHANNEL DMX-CONFIGURATION:**

DMX Channel	DMX-value	function	remarks
1	000-005	Blackout	Static Color DMX Channel 2 can not be used
	006-033	White	
	034-061	Red	
	062-089	Green	
	090-117	Blue	
	118-145	Program 1	Preprogrammed Shows You can use DMX channel 2 for Speed or Sound control
	146-173	Program 2	
	174-201	Program 3	
	202-229	Program 4	
	230-255	Program 5	
2	000-250	Speed Control	Speed of the selected program via channel 1
	251-255	Sound Control	Sound control for the selected program via channel 1
3	000	No rotation	Motor Control
	001-127	Clockwise rotation	
	128	No rotation	
	129-255	Anticlockwise rotation	

**9 CHANNEL DMX-CONFIGURATION:**

DMX Channel	DMX-value	function	remarks
RGB Projector control			
1	000-255	Dimmer RED	
2	000-255	Dimmer GREEN	
3	000-255	Dimmer BLUE	
4	000-255	Dimmer WHITE	
5	000-005	No strobe	STROBE
	006-250	Strobe Speed	
	251-255	Sound Strobe	

6	000	Stop	Motor		
	001-127	Speed direction 1			
	128	Stop			
	129-255	Speed direction 2			
7	000-005	Blackout	<b>LED 1</b>	<b>LED 2</b>	<b>LED 3</b>
	006-013	Static Colors	Red	Red	Red
	014-022		Green	Green	Green
	023-031		Blue	Blue	Blue
	032-040		White	White	White
	041-049		Red	Green	Blue
	050-058		Red	Green	White
	059-067		Red	Blue	White
	068-076		Green	Blue	White
	077-085		Red-Green	Red-Blue	Red-White
	086-094		Green-Red	Green-Blue	Green-White
	095-103		Blue-Red	Blue-Green	Blue-White
	104-112		White-Red	White-Green	White-Blue
	113-121		Red-Green	Red-Green	Red-Green
	122-130		Red-Blue	Red-Blue	Red-Blue
	131-139		Red-White	Red-White	Red-White
	140-148		Green-Blue	Green-Blue	Green-Blue
	149-157		Green-White	Green-White	Green-White
	158-166		Blue-White	Blue-White	Blue-White
	167-175		Red-Green-Blue	Red-Green-Blue	Red-Green-Blue
	176-184		Red-Green-White	Red-Green-White	Red-Green-White
	185-193		Green-Blue-White	Green-Blue-White	Green-Blue-White
	194-202		Red-Green-Blue	Red-Green-Blue	Red-Green-Blue
	203-211		R-G-B-W	R-G-B-W	R-G-B-W
	212-220		P 1 / S 1	Automatic & Sound controlled programs	
	221-229	P 2 / S 2			
	230-238	P 3 / S 3			
239-247	P 4 / S 4				
248-255	P 5 / S 5				
8	000-250	Program Speed	Speed/sound control for the programs of dmx channel 7 (CH7 from 212 to 255)		
	004-066	Sound Controlled			
9	000	No rotation	Motor Control control for the programs of dmx channel 7		
	001-127	Clockwise rotation			
	128	No rotation			
	129-255	Anticlockwise rotation			

**19 CHANNEL DMX-CONFIGURATION:**

DMX Channel	DMX-value	function	remarks		
RGB Projector control					
1	000-255	Dimmer RED	Led 1		
2	000-255	Dimmer GREEN			
3	000-255	Dimmer BLUE			
4	000-255	Dimmer WHITE			
5	000-005	No strobe	Led 1 STROBE		
	006-250	Strobe Speed			
	251-255	Sound Strobe			
6	000-255	Dimmer RED	Led 2		
7	000-255	Dimmer GREEN			
8	000-255	Dimmer BLUE			
9	000-255	Dimmer WHITE			
10	000-005	No strobe	Led 2 STROBE		
	006-250	Strobe Speed			
	251-255	Sound Strobe			
11	000-255	Dimmer RED	Led 3		
12	000-255	Dimmer GREEN			
13	000-255	Dimmer BLUE			
14	000-255	Dimmer WHITE			
15	000-005	No strobe	Led 3 STROBE		
	006-250	Strobe Speed			
	251-255	Sound Strobe			
16	000	Stop	Motor		
	001-127	Speed direction 1			
	128	Stop			
	129-255	Speed direction 2			
17	000-005	Blackout	<b>LED 1</b>	<b>LED 2</b>	<b>LED 3</b>
	006-013	Static Colors	Red	Red	Red
	014-022		Green	Green	Green
	023-031		Blue	Blue	Blue
	032-040		White	White	White
	041-049		Red	Green	Blue
	050-058		Red	Green	White
	059-067		Red	Blue	White
	068-076		Green	Blue	White
	077-085		Red-Green	Red-Blue	Red-White
	086-094		Green-Red	Green-Blue	Green-White
	095-103		Blue-Red	Blue-Green	Blue-White
	104-112		White-Red	White-Green	White-Blue
	113-121		Red-Green	Red-Green	Red-Green
	122-130		Red-Blue	Red-Blue	Red-Blue

	131-139		Red-White	Red-White	Red-White
	140-148		Green-Blue	Green-Blue	Green-Blue
	149-157		Green-White	Green-White	Green-White
	158-166		Blue-White	Blue-White	Blue-White
	167-175		Red-Green-Blue	Red-Green-Blue	Red-Green-Blue
	176-184		Red-Green-White	Red-Green-White	Red-Green-White
	185-193		Green-Blue-White	Green-Blue-White	Green-Blue-White
	194-202		Red-Green-Blue	Red-Green-Blue	Red-Green-Blue
	203-211		R-G-B-W	R-G-B-W	R-G-B-W
	212-220	P 1 / S 1	Automatic & Sound controlled programs		
	221-229	P 2 / S 2			
	230-238	P 3 / S 3			
	239-247	P 4 / S 4			
	248-255	P 5 / S 5			
18	000-250	Program Speed	Speed/sound control for the programs of dmx channel 17 (CH17 from 212 to 255)		
	004-066	Sound Controlled			
19	000	No rotation	Motor Control control for the programs of dmx channel 17		
	001-127	Clockwise rotation			
	128	No rotation			
	129-255	Anticlockwise rotation			

**Extra functions in the menu**

- Press the [MENU] button until the display shows [SYS].
- Press the [ENTER] button if you want to enter this part of the menu with extra options.
- Use the [UP/DOWN] buttons to browse the extra functions in this System menu
  - **[di Sr] = Display inversion**  
 With this option you can invert the information that is shown on the display. This is very useful if you hang the unit upside-down in a light bridge.
    - Press the [ENTER] button to enter the option settings
    - Use the [UP / DOWN] button to select the desired mode:
      - ON = function activated. The display is ready for units that hang upside-down.
      - OFF = function deactivated. The LED display is ready for units that are not hanging upside-down.
  - **[diSP] = Display Blackout.**  
 With this option you can decide if the display should be always on or if it can go out after a while when no new information needs to be shown
    - Press the [ENTER] button to enter the option settings
    - Use the [UP / DOWN] button to select the desired mode:
      - ON = function activated. When no new information needs to be shown on the display, the display will turn off.
      - OFF = function deactivated. The LED display will be always lit.
    - Press the [ENTER] button to confirm your setting
  - **[ir] = Infra Red Remote controller:** with this function you can deactivate the infra-red remote controller receiver.
    - Press the [ENTER] button to enter the option settings
    - Use the [UP / DOWN] button to select the desired mode:
      - ON = IR remote receiver activated.
      - OFF = IR remote receiver deactivated.
  - **[rESt] = Factory Reset.** This function can be used to reset all the settings of the unit to the original factory settings
    - Just press the [ENTER] button to reset the unit.

## MAINTENANCE

- Make sure the area below the installation place is free from unwanted persons during servicing.
- Switch off the unit, unplug the mains cable and wait until the unit has been cooled down.

**During inspection the following points should be checked:**

- All screws used for installing the device and any of its parts should be tightly fastened and may not be corroded.
- Housings, fixations and installations spots (ceiling, truss, suspensions) should be totally free from any deformation.
- When an optical lens is visibly damaged due to cracks or deep scratches, it must be replaced.
- The mains cables must be in impeccable condition and should be replaced immediately when even a small problem is detected.
- In order to protect the device from overheat the cooling fans (if any) and ventilation openings should be cleaned monthly.
- The interior of the device should be cleaned annually using a vacuum cleaner or air-jet.
- The cleaning of internal and external optical lenses and/or mirrors must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: damp, smoky or particularly dirty surroundings can cause greater accumulation of dirt on the unit's optics.
  - Clean with a soft cloth using normal glass cleaning products.
  - Always dry the parts carefully.
  - Clean the external optics at least once every 30 days.
  - Clean the internal optics at least every 90 days.

**Attention: We strongly recommend internal cleaning to be carried out by qualified personnel!**

## SPECIFICATIONS


<b>Mains Input:</b>	AC 100~240V, 50/60Hz
<b>Fuse:</b>	250V 1.6A slow blow (20mm glass)
<b>Total Power consumption:</b>	60W
<b>Sound Control:</b>	Internal microphone
<b>DMX connections:</b>	3pin XLR male / female
<b>DMX channels:</b>	1, 3, 9 or 19 channels
<b>LED power:</b>	5 x 8Watt RGBW LEDs
<b>Working temperature:</b>	10°C to 40°C
<b>Dimensions:</b>	397 x 397 x 510mm
<b>Weight:</b>	4.23kg

**All the information is subject to change without prior notice**  
**You can download the latest version of this user manual on our website: [www.beglec.com](http://www.beglec.com)**







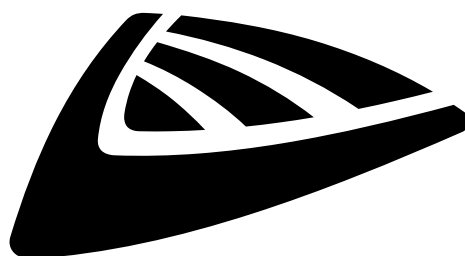

**JB SYSTEMS**

## **MAILING LIST**

**EN: Subscribe today to our mailing list for the latest product news!**

**FR: Inscrivez-vous à notre liste de distribution si vous souhaitez suivre l'actualité de nos produits!**

**NL: Abonneer je vandaag nog op onze mailinglijst en ontvang ons laatste product nieuws!**

**DE: Abonnieren Sie unseren Newsletter und erhalten Sie aktuelle Produktinformationen!**

**ES: Suscríbete hoy a nuestra lista de correo para recibir las últimas noticias!**

**PT: Inscreva-se hoje na nossa mailing list para estar a par das últimas notícias!**

**[WWW.JB-SYSTEMS.EU](http://WWW.JB-SYSTEMS.EU)**

**Copyright © 2018 by BEGLEC NV**

t Hofveld 2C ~ B1702 Groot-Bijgaarden ~ Belgium

Reproduction or publication of the content in any manner, without express permission of the publisher, is prohibited.